



2 S. West Street • P.O. Box 237
Cloverdale, IN 46120
Voice • 765.795.4261 • 800.922.6677
Fax • 765.795.6599
www.weEndeavor.com



e-TV

Entone
Remote

UE Titan
Remote

Entone Nova
Remote



Remote Control
Quick Start
Guide

Programming Your Entone Remote Control

To Program Remote to Control Your TV or AUX Device:

1. Locate the device code for your desired device in the device code table provided at www.weEndeavor.com/remotecodes. If you cannot find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can try the auto search at the end of this section.
2. Turn on your device and with media inserted (if applicable).
3. On the remote control, press a device mode key for 5 seconds (i.e., **TV** or **AUX**). The device mode key will light up.
NOTE: Use the "AUX" mode key for a VCR, DVD player, cable box, satellite receiver or audio device.
4. Enter the four-digit device code for your device. Device codes can be found at www.weEndeavor.com/remotecodes. If you perform this procedure correctly, the selected device mode key backlight will blink twice.
5. Aim the remote control at your device and press **POWER** once. The device should turn off. If it does not respond, repeat the above steps.

 


NOTE: While in programming mode, if no key is received within 30 seconds or an invalid device code is entered, the device mode key backlight will blink rapidly 7 times and then stop - indicating an error.


Navigate Favorites on the GUIDE

A FAVORITES LIST allows you to select channels you watch most often, placing them on a list that is quickly accessed in the GUIDE.

You can continue to press the GUIDE key on your remote control to toggle between any saved FAVORITES such as **All**, **Subscribed**, **HD**, **PPV** and any other FAVORITES LISTS you create.

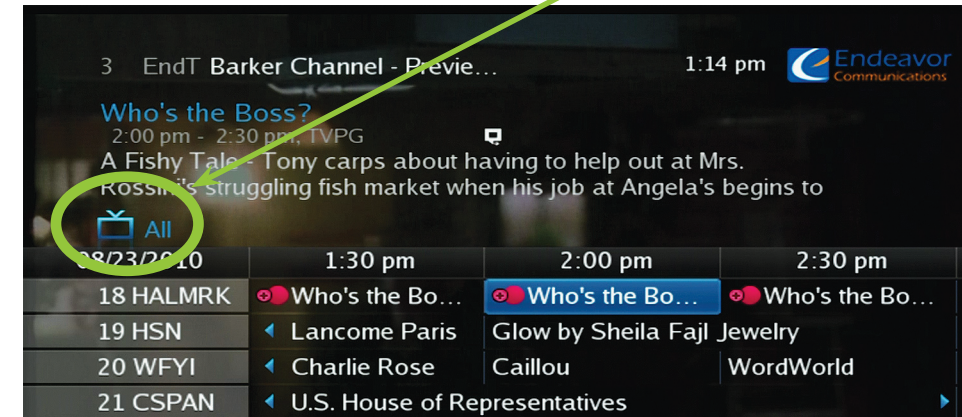

Entone Remote

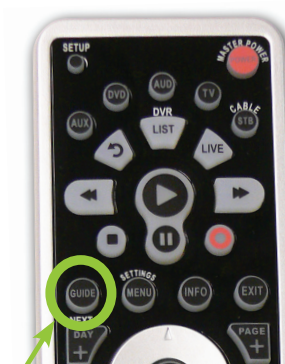 

UE Titan Remote

 


Entone Nova Remote

NOTE: You can toggle between all FAVORITES by continuing to press the GUIDE key on your remote control.

Your Set Top Box & DVR

Entone 455 Set Top Box
(Expanded Services Console ADB 5810)

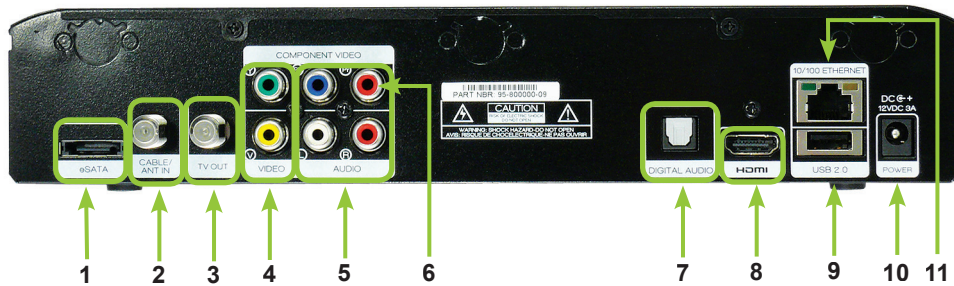

1. **eSATA:** Connects the set top box to an external DVR storage device.
2. **CABLE/ANT IN:** Connects the set top box to a wall jack using coax cable to provide video service.
3. **TV Out:** Connects the set top box to your TV using a standard coax cable - provides audio and video.
4. **VIDEO:** Connects the set top box to provide good quality video - provides video only.
5. **AUDIO LEFT/RIGHT:** Connects the set top box to provide stereo audio - provides audio only.
6. **COMPONENT (HD Analog) OUTPUT:** (Video/Audio Left/Audio Right) Connects the set top box to your TV or VCR to provide high definition quality analog video and stereo audio.
7. **DIGITAL AUDIO (S/PDIF):** Connects the set top box to a home theater system via fiber optic cable for best quality audio - provides audio only.
8. **HDMI:** (High Definition Media Interface) Connects the set top box to your HDTV using an HDMI cable - provides audio and video.
9. **USB:** (Universal Serial Bus) Connects the set top box to technician's equipment and other devices.
10. **Power Adapter:** Provides power to the set top box.
11. **Ethernet:** Connects the set top box to the video service using a CAT5 Ethernet cable.

Your Entone Remote Control at a Glance



Pressing the **TV Button** tells remote to control the **TV**



Pressing the **STB Button** tells remote to control the **Set Top Box**

Power
Turns on or off device selected.

Playback Controls
REPLAY: goes back approx. 7 seconds.
REW/FF: rewinds/fast forwards video (press repeatedly to increase speed 4x, 15x, 60x, 300x)
SKIP: advances ahead in 30 second increments.
REC: starts or stops recording a program.
PAUSE: pauses video.
PLAY: plays video or resumes paused program.
STOP: stops playback of video.

Options
Provides additional options for certain on-screen menu items.

Menu
Displays on-screen menu.

Navigation
ARROW KEYS: navigates up, down, left and right on on-screen guide or menus.
OK: selects option that is highlighted.

Back
Return to the previous selection.

VOL +/-
Turns volume on or off.

Mute Button
Turns sound on and off of selected device.

INPUT
Changes current AV input of selected device programmed.

Device Control Buttons
Selects the device you wish to control. Example - the STB button allows your remote to control the functions of your Set Top Box. AUX button controls functions on DVD or other device.

Movies on Demand

DVR Control

Info
Shows on-screen information for selected program.

Exit
Exits out of current menu item.

Guide
Controls the on-screen program guide.

CH/PG up/down
Controls your channel or page selections up or down. INFO BAR is displayed when channels are selected.

Last
Moves back to previous channel.

Number Buttons
Enters channel numbers, device setup codes and PIN numbers. INFO BAR is displayed when channels are selected.

CC
Activates Set Top Box closed captioning.

Visit www.weEndeavor.com/television/tv support for additional instructions and remote control programming device codes for the Entone remote.

NOTE - The default code for Parental Controls is "0"



Quick Start Guide to Using Your Entone Nova Remote Control

STEP 1 - Turn ON or OFF your TV

 
1. Press the TV button ONCE
(The TV button will **light up red** when pressed and will go off when released)
2. Press the Power button ONCE
(The TV turns on. Pressing Power button again turns TV off)
You don't need to press TV button to change channels or control the TV volume!



IMPORTANT - YOUR TV MUST BE SET TO CHANNEL _____ TO BE ABLE TO RECEIVE ENDEAVOR CHANNELS

STEP 2 - Turn ON Set Top Box (STB)

1. Press the STB button ONCE
(The STB button will **light up red** when pressed and will go off when released)
2. Press the Power button ONCE
(The STB turns on. The BLUE POWER LIGHT will be illuminated. If this light is GRAY, repeat above step)

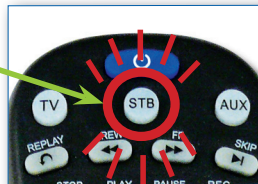


After pressing the STB button you can:

- > Adjust the channels up or down
- > Access the GUIDE, MENU and INFO
- > Adjust the volume up or down

STEP 3 - Navigate the Channels

You may change channels three ways:

 1. Pressing the Number buttons
2. Pressing the Channel up/down buttons
(HINT: When pressing Number and Channel up/down buttons, the INFO BAR is displayed at bottom of screen. The INFO BAR gives information about the current channel)
3. Making channel selections using the GUIDE

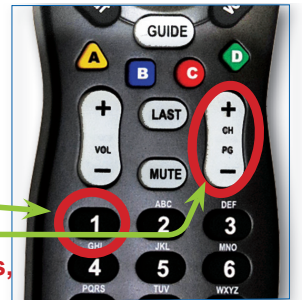


STEP 4 - Navigate the Guide

1. Press the GUIDE button ONCE
(HINT: You must press the STB button FIRST, then GUIDE)

The GUIDE screen appears. Channel selections are now shown 7 at a time at the bottom of the screen.

2. To select a channel from the GUIDE:

 - > Press Directional Arrow buttons
This scrolls through each channel
- > Press OK button to make channel selection
- (HINT: to bring up the next or previous 7 channel entries, Press the Channel up/down buttons)
- > Press EXIT button once and the GUIDE will disappear from screen

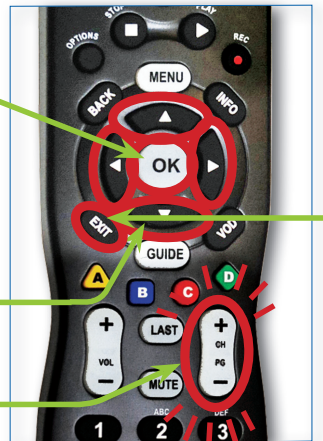

Device Control Button - Press device buttons ONCE to activate other entertainment devices such as a DVD Player. (You will need to use the remote control from your external device thereafter if you don't program your device with the entone remote).

 




Quick Start Guide to Using Your Entone Remote Control

STEP 1 - Turn ON or OFF your TV


1. Press the TV button ONCE
(The TV button will **light up red** when pressed and will go off when released)
2. Press the Power button ONCE
(The TV turns on. Pressing Power button again turns TV off)
You don't need to press TV button to change channels or control the TV volume!

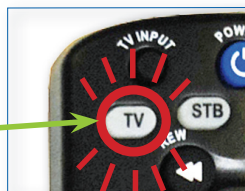

IMPORTANT - YOUR TV MUST BE SET TO CHANNEL _____ TO BE ABLE TO RECEIVE ENDEAVOR CHANNELS

STEP 2 - Turn ON Set Top Box (STB)

 1. Press the STB button ONCE
(The STB button will **light up red** when pressed and will go off when released)
2. Press the Power button ONCE
(The STB turns on. The BLUE POWER LIGHT will be illuminated. If this light is GRAY, repeat above step)

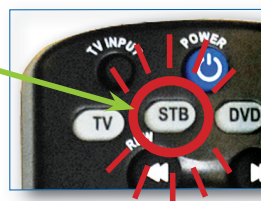


After pressing the STB button you can:

- > Adjust the channels up or down
- > Access the GUIDE, MENU and INFO
- > Adjust the volume up or down
- > Select ON DEMAND>RENTALS to select and purchase a VOD movie

STEP 3 - Navigate the Channels

You may change channels three ways:

 1. Pressing the Number buttons
2. Pressing the Channel up/down buttons
(HINT: When pressing Number and Channel up/down buttons, the INFO BAR is displayed at bottom of screen. The INFO BAR gives information about the current channel)
3. Making channel selections using the GUIDE

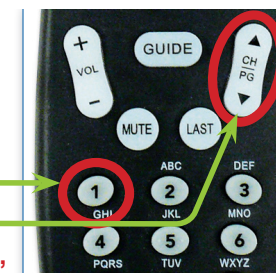


STEP 4 - Navigate the Guide

1. Press the GUIDE button ONCE
(HINT: You must press the STB button FIRST, then GUIDE)

The GUIDE screen appears. Channel selections are now shown 7 at a time at the bottom of the screen.

2. To select a channel from the GUIDE:

 - > Press Directional Arrow buttons
This scrolls through each channel
- > Press OK button to make channel selection
- (HINT: to bring up the next or previous 7 channel entries, Press the Channel up/down buttons)
- > Press EXIT button once and the GUIDE will disappear from screen

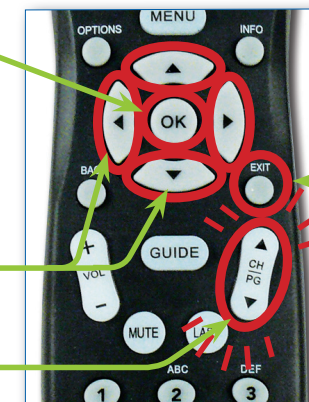

Device Control Button - Press device buttons ONCE to activate other entertainment devices such as a DVD Player. (You will need to use the remote control from your external device thereafter if you don't program your device with the entone remote).



Programming Your UE Titan Remote Control

To Program Devices with Your UE Titan Remote:

The Titan universal remote control comes pre-programmed to operate the set-top box that is supplied by your service provider. In addition, the Titan can be programmed to control four (4) additional home theater equipment devices.

NOTE: If you have another brand of set-top box that you wish to control with the STB key, you'll need to refer to "Re-Programming Set-Top Box Control".

1. Turn on all of the devices that you wish to control.
2. On the remote control, press the mode key that you wish to program once (AUX, DVD, AUD, or TV); it blinks once.
3. Press and hold SETUP until the mode LED blinks twice.
4. Search for the "Manufacturer's Codes" in the lookup below for the device you wish to control. Enter the first five-digit code for your device. If performed correctly, the mode LED blinks twice.

 
NOTE: If the selected mode LED emits a long blink, the entry is invalid. Repeat steps 2 through 4 and try entering the same code again.

5. Aim the remote control at the device and press POWER once. The device should turn off. If it does not, repeat steps 2 through 3, trying each code for your brand until you find one that works. If it still does not respond, try searching for the code ("Searching for Your Code").

NOTE: If the device does not have a POWER key, press the (Play) key. Repeat steps 2 through 5 for another mode and/or key or press and hold SETUP to exit programming. TV Code

Please use manual for device code selection

Your Entone Nova Remote Control at a Glance

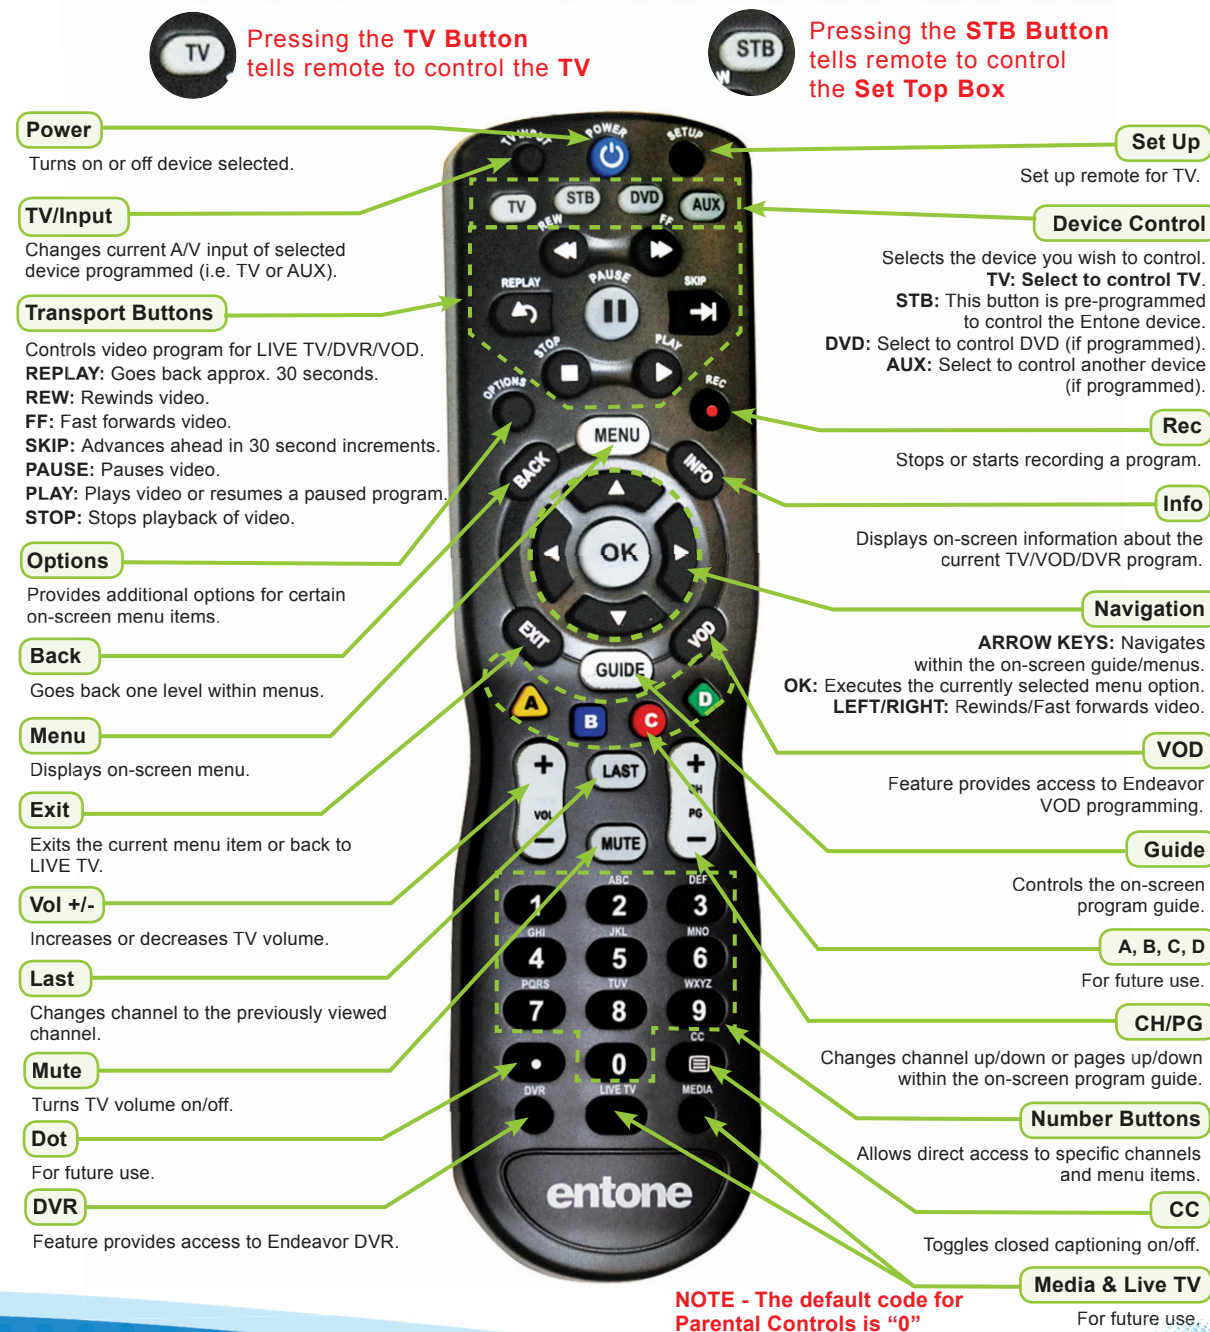

Programming Your Entone Nova Remote Control

To Program Devices with Your Entone Nova Remote:

1. Locate the device code for your device in the Device Codes table provided on the Entone Remote Control Reference Guide at <https://www.weendeavor.com/wp-content/uploads/Nova-Remote-Quick-Reference-Guide.pdf>. If you cannot find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can try the auto search on page 7 of the online Entone Remote Control Reference guide.
2. Turn on your device.
3. On the remote control, press the Device Control key (TV/STB/DVD/ AUX) to choose the device mode.
4. Press the “SETUP” key and the LED blinks twice.
5. Enter the five-digit device code for your device. If you perform this procedure correctly, the LED will blink twice. Otherwise, it has a long blink.
6. Press “Power” key. If your device turns off, setup is complete.
7. If your device does not turn off, repeat this procedure using the next code for your device brand.

Please use the Entone Nova Remote Control Reference Guide for device code activation by visiting <https://www.weendeavor.com/wp-content/uploads/Nova-Remote-Quick-Reference-Guide.pdf>.

Your UE Remote Control at a Glance



Pressing the **TV Button** tells remote to control the **TV**



Pressing the **STB Button** tells remote to control the **Set Top Box**

Setup

Controls all device programming sequences.

Skip Back

Allows DVR instant replay of the last 7 seconds of program that you were watching.

Device Controls

Controls DVR and other programmable devices such as a DVD player.

Guide

Controls the on-screen program guide.

Menu

Brings up menu of devices you are controlling.

Directional Arrows

Navigates through menu of selected device such as the on-screen program guide. OK verifies selection.

Volume +/-

Controls volume level of your device up or down.

Mute Button

Turns sound off and on.

Keypad Numbers

Enters channel numbers and device setup codes. INFO BAR is displayed when channels are selected.

CC

Activates Set Top Box closed captioning.

Entertainment Device Keys

Selects the device you wish to control. Example - the STB button allows your remote to control the functions of your Set Top Box.

Power

Turns on or off device selected.

List

Pressing LIST>PVR accesses your DVR functionality.

Exit

Exits out of current screen selection including the on-screen program guide.

Info

Provides program information for selected channel.

Page +/-

Navigates up or down through menu screens and program guide.

A, B, C, D

For future use.

CH +/-

Controls your channel selections up or down. INFO BAR is displayed when channels are selected.

Last

Moves back to previous channel.

On Demand

Pressing ON DEMAND>RENTALS allows selection and purchase of VOD movie rental.



Quick Start Guide to Using Your UE Titan Remote Control

STEP 1 - Turn ON or OFF your TV

 
1. Press the TV button ONCE
(The TV button will **light up red** when pressed and will go off when released)
2. Press the Power button ONCE
(The TV turns on. Pressing Power button again turns TV off)
You don't need to press TV button to change channels or control the TV volume!



IMPORTANT - YOUR TV MUST BE SET TO CHANNEL _____ TO BE ABLE TO RECEIVE ENDEAVOR CHANNELS

STEP 2 - Turn ON Set Top Box (STB)

1. Press the STB button ONCE
(The STB button will **light up red** when pressed and will go off when released)
2. Press the Power button ONCE
(The STB turns on. The BLUE POWER LIGHT will be illuminated. If this light is GRAY, repeat above step)

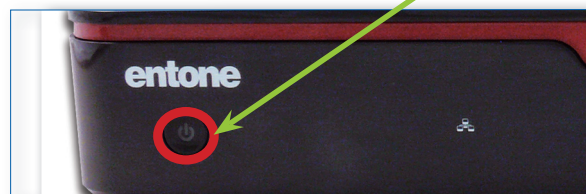

After pressing the STB button you can:

- > Adjust the channels up or down
- > Access the GUIDE, MENU and INFO
- > Adjust the volume up or down
- > Select ON DEMAND>RENTALS to select and purchase a VOD movie

STEP 3 - Navigate the Channels

You may change channels three ways:

1. Pressing the Number buttons
2. Pressing the Channel +/- buttons
(HINT: When pressing Number and Channel +/- buttons, the INFO BAR is displayed at bottom of screen. The INFO BAR gives information about the current channel)
3. Making channel selections using the GUIDE



 
STEP 4 - Navigate the Guide

1. Press the GUIDE button ONCE
(HINT: You must press the STB button FIRST, then GUIDE)

The GUIDE screen appears. Channel selections are now shown 5 at a time at the bottom of the screen.

2. To select a channel from the GUIDE:

- > Press Directional Arrow buttons +/-
This scrolls through each channel
- > Press OK button to make channel selection
(HINT: to bring up the next or previous 5 channel entries, Press the Channel +/- buttons)
- > Press OK button twice and the GUIDE will disappear from screen

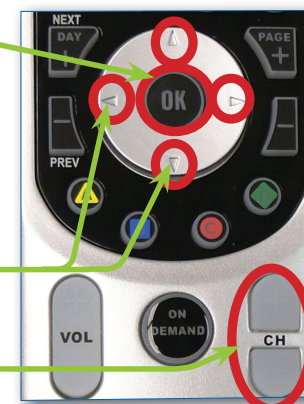

Device Buttons - Press device buttons ONCE to activate other entertainment devices such as a DVD Player. (You will need to use the remote control from your external device thereafter if you don't program your device with the UE remote). (HINT: pressing LIST>PVR allows access to your DVR).

