

THE **FUTURE**  
**NOW SHOWING**  
NOW SHOWING  
THE FUTURE

*New and Improved Movies On Demand Screen!*



**Endeavor**  
Communications

Welcome

# THE NEW WAY TO WATCH



Endeavor Digital TV is different than anything you have seen before. It isn't cable...it's better! Endeavor Digital TV offers great channels, many features and many choices. Watch what you want – sports, movies, news, cartoons, dramas, comedies – anything you can imagine is there. Watch when you want – with features like Autotune, Movies On Demand and digital video recording. Watch how you want – high quality digital video and sound. So sit back, relax and enjoy the future!

Digital TV User's Guide Copyright © 2005-2017 MS Communications. IPG screen images Copyright © 2010 Minerva Networks, Inc. Used with permission. All rights reserved. Portions Copyright Advanced Digital Broadcasting (ADB), Amino Communications, Ltd., Entone, Inc and Universal Electronics, Inc.. Used with permission. All rights reserved. All other images copyright and/or trademark of their respective owner(s). Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

This material may not be duplicated, in whole or in part, by any means, without the express written consent of MS Communications, Ringgold GA 30736 USA.

**Minerva release 2017**

# Table of Contents

<b>1 Remote Control Basics</b>	<b>8</b>
Entone Nova and Amino Remote Control Layout	8
System Buttons	9
Turn Your Set Top Box or TV On or Off	10
Change Channels	10
Adjust Volume	10
Programming Your Remote Control	11
<b>2 How To Use This Book</b>	<b>15</b>
Layout	15
Color-Codes & Icons	15
<b>3 Infobar</b>	<b>16</b>
Introducing The Infobar	16
Go To The Infobar	16
Infobar Layout	17
Using the Infobar	18
<b>4 Menubar</b>	<b>19</b>
Introducing the Menubar	19
Go To the Menubar	19
Understanding the Menubar	19
<b>5 Guide</b>	<b>21</b>
Introducing Guide	21
Go To Guide	21
Getting Around Guide	21
Favorites List in Guide	21
HDTV Programming	21
Guide Layout	22
<b>6 Guide - Alerts &amp; Recordings</b>	<b>25</b>
Introducing Alerts & Recordings	25
Setting a Reminder, Autotune or Recording	25
Editing a Recording	27
Setting a Series Recording	28
Editing a Series Recording	29
Skipping an Episode	30
Canceling an Autotune, Reminder, Recording, or Series Recording	33
Additional Information on Canceling Events	33
<b>7 Recording</b>	<b>34</b>
Recordings	34
Quick Recording	34

# Table of Contents

General Guidelines About Recordings	34
Pausing Live TV (PLT)	34
Controlling Live TV	34
DVR Playback Controller	35
Schedule Event	36
Accessing the Schedule Event Screen	36
Configuring the Schedule Event Screen	36
Record By Search	37
<b>8 DVR</b>	<b>38</b>
Introducing DVR	38
Go To DVR	38
The DVR Menu Quick Reference	38
Recordings	38
Recordings: Watching a Recorded Program	39
Recordings: Sorting Recordings	40
Recordings: Locking or Unlocking a Recording	40
Recordings: Deleting a Recording	41
Recordings: Stopping a Program Currently Recording	41
To Record	41
To Record: Sort Future Recordings	41
To Record: Canceling a Future Scheduled Recording	41
Schedule Priority	42
Schedule Priority: Changing Schedule Priority	42
Schedule Event	42
Schedule Event: Editing a Schedule Event	43
Record History	43
Record History: Reviewing Record History	43
<b>Whole Home DVR</b>	<b>46</b>
Set a Recording	46
Non-DVR Set Top Box Recordings List	46
Watching from Room to Room	49
<b>9 Pay Per View</b>	<b>52</b>
Introducing Pay Per View (PPV)	52
Go To Pay Per View	52
Buying Pay Per View	52
<b>10 Movies On Demand</b>	<b>54</b>
Introducing Movies On Demand	54
To Access	54
Getting Around Movies On Demand	54

# Table of Contents

Bringing Up the Play Menu	55
Play a Program & Add It to My Library	55
Rent a Program	55
Movies On Demand Browse & Search Options	56
Stop a Video and Exit Movies On Demand	57
<b>11 My Library</b>	<b>58</b>
Introducing My Library	58
The My Library Menu	58
Go To My Library	58
Go To Videos	58
Watching a Movies On Demand Video Rental	59
Introducing PPV Events	59
Go To PPV	59
Introducing Reminders	60
Go To Reminders	60
Cancel a Reminder or Autotune	60
Introducing Messages	61
Go To Messages	61
Reading a Message	61
Introducing Caller ID	61
Go To Caller ID	62
Deleting a Caller ID Entry	62
<b>12 Settings</b>	<b>63</b>
Introducing Settings	63
Go To Settings	63
Activating <b>Parental Control</b>	<b>63</b>
Selecting Parental Control Settings	63
Turning Parental Controls On and Off	64
Working With Additional Preferences	65
Working With Settings/Users	67
Adding a User Account	68
Editing a User Account	70
<b>13 Sign Out / Sign In</b>	<b>72</b>
Sign Out / Sign In	72
Go To Sign Out / Sign In	72
<b>14 Favorites</b>	<b>73</b>
Introducing Favorites	73

# Table of Contents

Go To Favorites	73
Choosing a Favorites List	73
Creating or Editing a Favorites List	74
Delete a Favorites List	74
<b>15 Search</b>	<b>75</b>
Introducing Search	75
Go To Search	75
Search for a Program	75
<b>Set Top Box</b>	<b>77</b>
Amino Kamai 6 Wireless	77
<b>Set Top Box</b>	<b>78</b>
Kamai 500 Set Top Box	78
<b>DVR/Set Top Box</b>	<b>79</b>
Entone 455 DVR & 450 Set Top Box	79
<b>DVR/Set Top Box</b>	<b>80</b>
Entone 505 DVR & 500 Set Top Box	80
<b>Movie Ratings</b>	<b>81</b>
MPAA (Motion Picture Association of America) Ratings System	81
<b>TV Ratings</b>	<b>82</b>
TV Parental Guidelines Ratings System	82
Program Ratings	82
Content Ratings	82
<b>Notes</b>	<b>86</b>



### Telephone

#### e-VOICE™

- Over 20 Calling Features
- 
- Long Distance Calling
- 
- Reliable Customer Service



### Internet

#### e-FORCE™

- Enjoy Online Gaming, Streaming Video & Much More
- 
- No Data Limits on Internet Speeds**
- 
- Now Available Speeds Up to 1,000 Mbps\* (1Gig)**



### Television

#### e-TV™

- Over 350 Popular TV Channels\*
- 
- Enjoy VOD & HD Channels\*
- 
- Watch & Record Live TV with WHDVR\*
- 
- WatchTV Everywhere\*



### Security

#### e-SHIELD™ Security Solutions

- Security Solutions for Home & Business
- 
- Home & Energy Management
- 
- 24/7 Monitoring
- 
- Free Quotes



### Medical Alert

#### MEDICAL ALERT™

- 24/7 Monitoring
- 
- Wireless Two-Way Voice Communication
- 
- Help at the Push of a Button



### IT Services

#### TECHS™ IT SERVICES

- IT Services
- 
- Business Phone Solutions
- 
- Free Quotes



### Wireless

#### e-WIRELESS™

- Enhanced Nationwide 4G Coverage†**
- 
- Quality Network
- 
- Nationwide Rate Plans
- 
- Simple & Affordable

# 1 Remote Control Basics

## Entone Nova and Amino Remote Control Layout

### Power

Turns on or off device selected.

### TV/INPUT

Changes current A/V input of selected device programmed (i.e. TV or AUX).

### Transport Buttons

Controls video program for LIVE TV/DVR/VOD.

**REPLAY:** Goes back approx. 30 seconds

**REW:** Rewinds video.

**FF:** Fast forwards video.

**SKIP:** Advances ahead in 30 second increments.

**PAUSE:** Pauses video.

**PLAY:** Plays video or resumes a paused program.

**STOP:** Stops playback of video.

### OPTIONS

Provides additional options for certain on-screen menu items.

### BACK

Goes back one level within menus.

### EXIT

Exits the current menu item or back to LIVE TV.

### LAST

Changes channel to the previously viewed channel.

### VOL +/-

Increases or decreases TV volume.

### MUTE

Turns TV volume on/off.

### Number Buttons

Allows direct access to specific channels and menu items.

### Dot

For future use.

### DVR

Feature provides access to Endeavor DVR.

### MEDIA & LIVE TV

For future use.

### SETUP

Set up remote for TV.

### Device Control

Selects the device you wish to control.

**TV:** Select to control TV

**STB:** This button is pre-programmed to control the Entone Device.

**DVD:** Select to control DVD (if programmed).

**AUX:** Select to control another device (if programmed).

### REC

Stops or starts recording a program.

### MENU

Displays on-screen menu.

### INFO

Displays on-screen information about the current TV/VOD/DVR program.

### Navigation

**ARROW KEYS:** Navigates within the on-screen guide/menus.

**OK:** Executes the currently selected menu option.

**LEFT/RIGHT:** Rewinds/Fast forwards video.

### VOD

Feature provides access to Endeavor VOD programming.

### GUIDE

Controls the on-screen program guide.

### C

Provides access to DVR.

### CH/PG

Changes channel up/down or pages up/down within the on-screen program guide.

### B

Provides access to Movies on Demand

### CC

Toggles closed captioning on/off.





# 1 Remote Control Basics

## System Buttons

---

There are a number of buttons on your remote that display different features of your service.

**MENU** displays the Menubar when in cable [STB] mode, and in [TV] mode you will see your TV's menu. The Menubar provides quick access to every feature supported by your service.

For more information about the Menubar, see section [4 Menubar](#).

**INFO** displays the Infobar, a feature that lets you see information on what you're watching, what's coming on next, and what's on other channels.

For more information on the Infobar, see section [3 Infobar](#).

**EXIT** causes your set top box to exit whatever screen you are seeing and return you to normal TV viewing. If you ever get lost on a screen, it is always safe to press **EXIT** and then start over.

Hitting **EXIT** goes to the last program you were watching.

# 1 Remote Control Basics

## Turn Your Set Top Box or TV On or Off

---

The device selection buttons tell your remote whether you want to control your set top box or your television.

To turn your TV on or off, press the **TV** button then the **POWER** button.

To turn your set top box on or off, press the **STB** button and then the **POWER** button.

If pressing **POWER** turned the wrong device on or off, press the **POWER** button again, press the appropriate device selection button (**TV**, **AUD**, **DVD**, **AUX** or **STB**) and press **POWER** once more.

***Note: It is not necessary to turn your set top box off.***

***Note: Your remote control must have the remote code programmed in before it can send the correct signals for your TV. If the list of TV brand codes was not included in your installation pack, please contact customer service.***

## Change Channels

---

The **CH+/-** button will change channels up or down one at a time.

The **Number Pad** can be used to directly enter a channel number.

**GUIDE** will display the Interactive Program Guide so you can find a program you like. If the program is on now, you can tune to the channel showing it. If not, you can set a scheduled event to remind you when it does come on. If your set top box supports recording, you can schedule a recording for the program.

For more information on how to use the Guide, see section **5 Guide**.

For more information on setting Reminders, Autotunes and Recordings, see **Setting a Reminder, Autotune or Recording** in section **6 Guide - Alerts & Recordings**.

## Adjust Volume

---

The **VOL+/-** button will adjust the volume gradually.

The **MUTE** button will toggle the sound on and off.

# Programming Your Entone Remote Control

## To Program Remote to Control Your TV or AUX Device:

1. Locate the device code for your desired device in the device code table provided at **[www.weEndeavor.com/remotecodes](http://www.weEndeavor.com/remotecodes)**. If you cannot find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can try the auto search at the end of this section.
2. Turn on your device and with media inserted (if applicable).
3. On the remote control, press a device mode key for 5 seconds (i.e., **TV** or **AUX**). The device mode key will light up.  
**NOTE: Use the "AUX" mode key for a VCR, DVD player, cable box, satellite receiver or audio device.**
4. Enter the four-digit device code for your device. Device codes can be found at **[www.weEndeavor.com/remotecodes](http://www.weEndeavor.com/remotecodes)**. If you perform this procedure correctly, the selected device mode key backlight will blink twice.
5. Aim the remote control at your device and press **POWER** once. The device should turn off. If it does not respond, repeat the above steps.



**NOTE: While in programming mode, if no key is received within 30 seconds or an invalid device code is entered, the device mode key backlight will blink rapidly 7 times and then stop - indicating an error.**

 


# Quick Start Guide to Using

## STEP 1 - Turn ON or OFF your TV

1. **Press the TV button ONCE**  
(The TV button will **light up red** when pressed and will go off when released)
2. **Press the Power button ONCE**  
(The TV turns on. Pressing Power button again turns TV off)


**You don't need to press TV button to change channels or control the TV volume!**

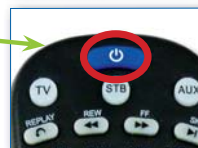

**IMPORTANT - YOUR TV MUST BE SET TO CHANNEL \_\_\_\_\_ TO BE ABLE TO RECEIVE ENDEAVOR CHANNELS**

## STEP 2 - Turn ON Set Top Box (STB)

 1. **Press the STB button ONCE**  
(The STB button will **light up red** when pressed and will go off when released)
2. **Press the Power button ONCE**  
(The STB turns on. The BLUE POWER LIGHT will be illuminated. If this light is GRAY, repeat above step)

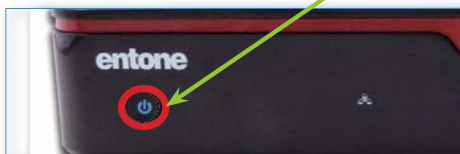

After pressing the STB button you can:

- > Adjust the channels up or down
- > Access the GUIDE, MENU and INFO
- > Adjust the volume up or down

# Your Entone Nova Remote Control

## STEP 3 - Navigate the Channels

You may change channels three ways:

- 1. Pressing the Number buttons
- 2. Pressing the Channel up/down buttons  
(HINT: When pressing Number and Channel up/down buttons, the INFO BAR is displayed at bottom of screen. The INFO BAR gives information about the current channel)
- 3. Making channel selections using the GUIDE



 
## STEP 4 - Navigate the Guide

- 1. Press the GUIDE button ONCE  
(HINT: You must press the STB button FIRST, then GUIDE)

The GUIDE screen appears. Channel selections are now shown 7 at a time at the bottom of the screen.

- 2. To select a channel from the GUIDE:

- > Press Directional Arrow buttons  
This scrolls through each channel
- > Press OK button to make channel selection
- (HINT: to bring up the next or previous 7 channel entries, Press the Channel up/down buttons)
- > Press EXIT button once and the GUIDE will disappear from screen

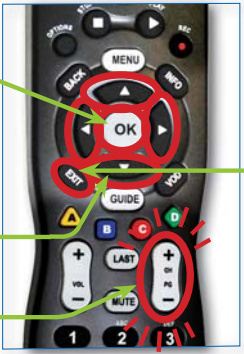


Device Control Button - Press device buttons ONCE to activate other entertainment devices such as a DVD Player. (You will need to use the remote control from your external device thereafter if you don't program your device with the entone remote).



## Navigate Favorites on the GUIDE

 A FAVORITES LIST allows you to select channels you watch most often, placing them on a list that is quickly accessed in the GUIDE.

You can continue to press the GUIDE key on your remote control to toggle between any saved FAVORITES such as **All**, **Subscribed**, **HD**, **PPV** and any other FAVORITES LISTS you create.

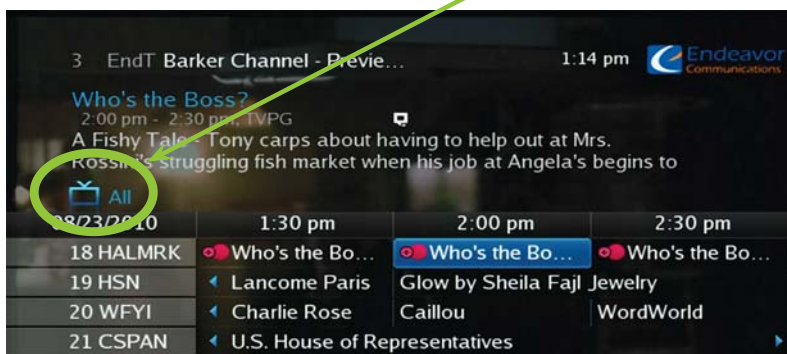

Entone Remote



UE Titan Remote



Entone Nova Remote

**NOTE: You can toggle between all FAVORITES by continuing to press the GUIDE key on your remote control.**

## 2 How To Use This Book

### Layout

Instructions are paired with screen shots to illustrate the process and provide confirmation of what you should see on your TV.

Section headings and on-screen text, such as screen titles, messages and options are shown in **Blue Bold Type**.

Buttons on the remote control are represented by a graphic of that button, or **Red Bold Type** when a graphic cannot be shown.

### Color-Codes & Icons

Program listings may display icons based on settings for a particular program.

#### Program Attributes



Autotune



Reminder



Record\*



Series-Record\*



Series Record Episode Skipped\*



Dolby Digital Audio



Favorite



Alert Symbol



 
Lock Program



Live TV



Whole Home DVR



Control On/Control Off

***\*Record and Series Record only appear if your set top box supports recording.***

All menubar icons and explanations are in **4 Menubar**.

***Note: Your service provider uses a default PIN code for customers. For instructions on changing the default PIN code, go to Settings - Editing a User Account.***

# 3 Infobar



## Introducing The Infobar

 
The Infobar is a quick way of finding information about the show you are watching, what comes on later, and what is on other channels.

## Go To The Infobar

There are three ways to make the basic Infobar appear.

1. Press **INFO** on your remote control.
2. Press the **Up** or **Down Arrow Keys** on your remote control.
3. The basic Infobar will also appear any time you change channels.


Once the Infobar is active, press **INFO** again to display the detailed Infobar. It adds information on directors, actors and the name of the next program.

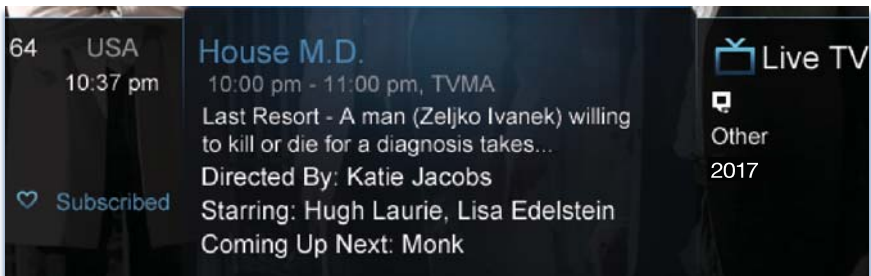



## 3 Infobar
 
### Infobar Layout

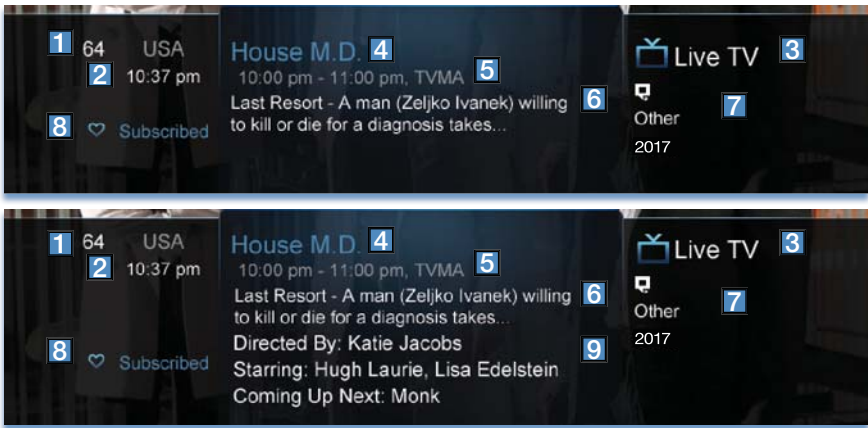

1

#### Channel Name & Number

The name and number of the channel currently listed in the Infobar.

2

#### Current Time

3

#### Program Type

Indicates whether you are watching Live TV, a recorded program, or a Pay-Per-View program. This may also indicate if the program is Blocked/Restricted because of parental controls or that the Emergency Alert System is active.

4

#### Program Name

5

#### Program Start Time, End Time & Rating

6

#### Program Summary

7

#### Additional Program Information

Indicates the type of program (movie, sports, etc.), Closed Captioning, Dolby Digital audio, and year of original release.

8

#### Current Favorites List

9

#### Director, Stars & Coming Up

The detailed Infobar will list the director and stars of a program, along with the name of the next program on this channel. If you do not see director and actor information, you may need to press **INFO** again on your remote control to view that information.

# 3 Infobar

## Using the Infobar

### Step 1: Go To The Infobar

Press **INFO**, the **Up or Down Arrow Keys**, or change channels.



### Step 2a: See What's On Other Channels

Press the **Up or Down Arrow Keys** to scroll the Infobar through what is showing on other channels without actually changing channels.

 
If you find something you would rather watch on another channel, press **OK** to tune to that channel.



### Step 2b: See What's On Later

Press the **Right Arrow Key** to scroll ahead to upcoming programs for the channel listed on the Infobar.

Press **OK** while viewing info on a future program to bring up these options.

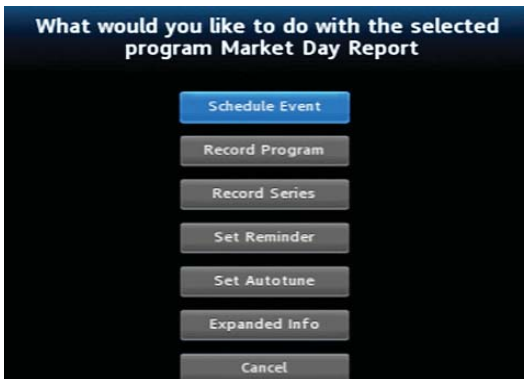


Press the **Left Arrow Key** to scroll back to the current channel listing. To exit the Infobar completely, press **Exit** on your remote.

**Note: Recording options will not be available if your set top box doesn't support those features.**
 
# 4 Menubar

## Introducing the Menubar

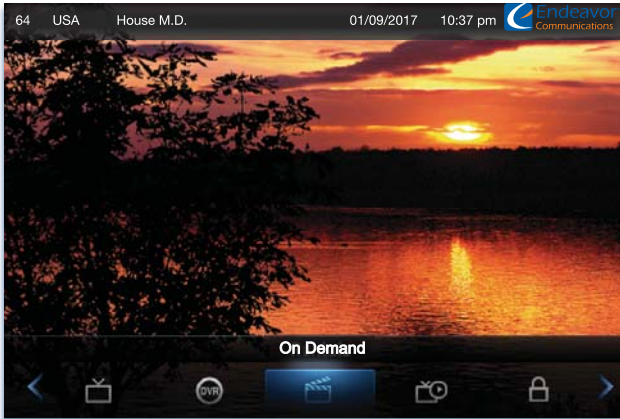

The Menubar is a quick and easy way to access any feature of your service.

## Go To the Menubar

To display the Menubar, press **MENU** on your remote control. Press the **Left/Right Keys** on your remote control to move the highlight through the menu. Press **Menu** again to exit or press **Exit** on your remote control.

## Understanding the Menubar



Guide

**Guide** will bring up the program guide. For information on Guide, please see section **5 Guide**. To record or edit a recording, please see section **6 Guide - Alerts & Recordings**.



PPV

**PPV** jumps directly to the Pay Per View channels in the program guide. For information on PPV, please see section **9 Pay Per View**.



DVR

**DVR** allows you to watch existing recordings, access a list of scheduled recordings, and edit and sort both. You can also create a recording (Schedule Event) and prioritize conflicting series recordings. For information on DVR, see section **8 DVR**.



Movies On Demand

**Movies On Demand** provides access to Video On Demand movies and programs. For information, see section **10 Movies On Demand**.

## 4 Menubar

### My Library



**My Library** provides quick access to previously purchased programs, reminders you have scheduled, messages regarding your service, and Caller ID history. For more information on My Library, see section **11 My Library**.

### Settings



**Settings** offers access to creating parental controls and setting blocked channels, determining how things appear on the screen (such as TV Caller ID), and creating, editing and deleting user accounts. For information on Settings, see section **12 Settings**.

### Sign out



**Sign Out / Sign In** allows you to sign out of the current user account. This only appears if you are using the **Enable Login** option under **Settings/Preferences**, have multiple user accounts, and have signed in with a user name and password. For information about Sign Out / Sign In, see section **13 Sign Out / Sign In**. For information on user accounts, see **User Settings** in section **12 Settings**.

### Favorites



**Favorites** allows you to choose, edit, create or delete a favorite channel list. For information on Favorites, see section **14 Favorites**.

### Search



**Search** allows you to search program listings or Movies On Demand rentals by title or key words. For information on Search, see section **15 Search**.

### Control On



**Control On / Control Off** allows higher level of security for parental controls. For information on parental controls, see section **12 Settings**.

### Control Off





---

### Introducing Guide

---

Guide is the place to quickly find out what's on now and what's playing later. You can set Reminders or Recordings for upcoming programs in Guide.

---

### Go To Guide

---

There are two ways to go to Guide.

You can press **GUIDE** on your remote control. You can also press **MENU**, scroll to the **Guide** icon, and press **OK**.

---

### Getting Around Guide

---

To navigate Guide...

- Move to a channel by entering the channel with the **Number Pad (0-9)**.
- Use the **Arrow Keys** on the remote to move the highlight through the Guide, channel by channel.
- Press the **Up** or **Down Arrows** to move the highlight to view what programs are currently showing on different channels.
- Press the **Left** or **Right Arrows** to move the highlight to view what future programs will be showing.
- Press **Page Up** or **Page Down** to jump up or down one screen of listings.
- Press **OK** to preview a current highlighted show on the Guide in the upper-left corner of your TV screen. To view the program full screen, press **OK** again.
- Continuing to press the **Guide** key on your remote will switch the **Favorite** list to **All**, **Subscribed**, **SD**, **HD**, **PPV**, and any **Favorites** lists that you create. This causes Guide to only display the channels included on each list. Cycling to **All** will display all available programming.
- Press **EXIT** to leave the Guide.

---

### Favorites List in Guide

---

A Favorites list allows you to select channels you watch most often, placing them on a list that is quickly accessed in **Guide**. **If you can't see all your channels, you may be limited by the Favorites list you've selected. Selecting All will display all available programs. Other Favorites lists will only display the channels you've previously added to that list.** For more details about creating, editing, or naming a Favorites list, see section **13 Favorites**.

---

### HDTV Programming

---

In order to watch HD programming, you will need an HDTV-capable set top box, cables, and TV, and will need to subscribe to an HD channel package.



## 5 Guide

### Guide Layout

#### Favorites List

 
Indicates the Favorites list currently in use.

#### Info Area

Provides information about the currently highlighted program.

#### Full Screen Picture

Allows you to watch TV while you are in Guide.

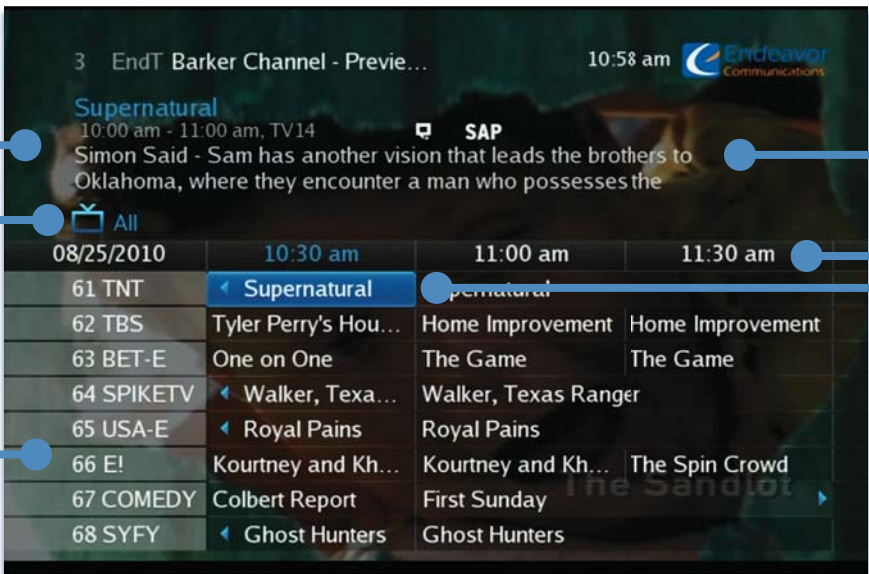

#### Highlight

Indicates what program listing is currently in focus.

#### Program Listings

Shows channel number, channel abbreviation, and program listings for each channel. Program listings may include icons to indicate a setting or feature for a particular program.

#### Listing Date/Time

Shows the date and time (divided into 30-minute increments) for the programs currently shown in Guide.

2 Months  
Tech Home  
Support

**FREE!**

5/1/18 - 6/30/18

Is Your Technology

**#FOOLPROOF?**

TECH HOME<sup>®</sup>

### Protect

- SecureIT Web Security (mobile/PC)
- Anti-theft for phone or tablet
- 50GB FileHopper file backup
- Password Genie password manager
- Covers one desktop & one mobile device

**FREE!**



### Protect Plus

- SecureIT Web Security (mobile/PC)
- Anti-theft for phone or tablet
- 250GB FileHopper file backup
- Password Genie password manager
- Covers four desktop & mobile devices

**\$9.99/mo.**



### Support

- Unlimited Premium Tech Support on all devices
- 24/7, US-based service
- Setup, support, troubleshooting
- Wi-Fi support with assessment app
- Includes PROTECT PLUS on four desktop or mobile devices.

**\$14.99/mo.**



Have No Fear. Endeavor is Here.

**Call Today to Order!**

**1-800-922-6677**



# You're Invited to attend Endeavor's Community Help Desk!



**FREE & OPEN TO THE PUBLIC!**

## **We'll help you:**

- ▶ Set up email
- ▶ Use smartphone features
- ▶ Navigate the internet

**And much more!**

**Bring your laptop, smartphone or tablet!**

**Every Second Thursday of  
the month from 4-6pm at the  
Cloverdale office.**

Endeavor Communications  
2 S. West Street • P.O. Box 237  
Cloverdale, Indiana 46120



**HAVE QUESTIONS OR WANT MORE INFORMATION Call  
1-800-922-6677**



 


## Introducing Alerts & Recordings

In this section, you will learn about setting or scheduling a recording, recording a series, and editing it. You will view the recordings under the DVR icon.

### Setting a Reminder, Autotune or Recording


A Reminder informs you a program is about to come on. An Autotune automatically changes the channel when the program is about to start. A Recording will automatically record the program to your set top box. On the **Schedule Event** screen, you can edit the channel number, time, type of timer (**Recording**, **Reminder**, or **Autotune**), and frequency of the event. See **7 Recording** and **8 DVR** for more details on **Schedule Event**.

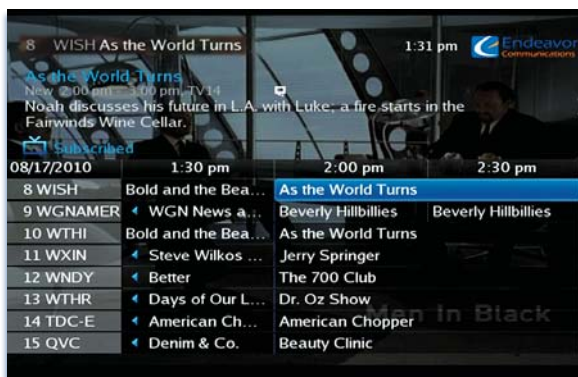

#### Step 1: Pick a Program

Pull up the Guide and find the future program you wish to view. Highlight the program listing and press **OK**. A pop-up menu will appear.

 ***Note: The pop-up options may appear different depending if your STB is DVR-enabled, or what type of program you selected to record.***

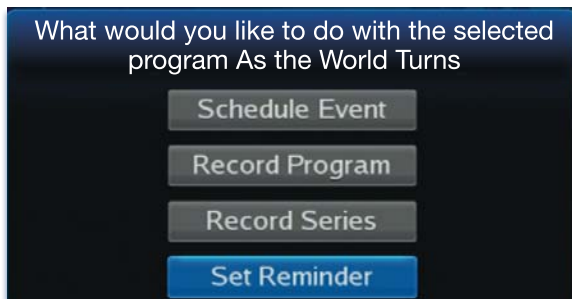

#### Step 2: Set the Reminder, Autotune or Record

Highlight **Record Program**, **Set Autotune**, or **Set Reminder** and press **OK**. You will then be returned to Guide.

See **7 Recording - Quick Recording** for how to record a currently playing program.



## 6 Guide - Alerts & Recordings



### Step 3: Return to Guide

The program listing now shows an icon.



 
Reminder set



Autotune set




Recording set

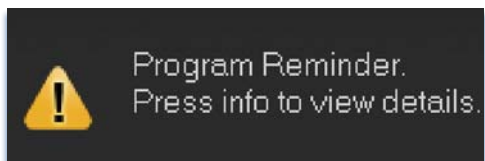


### Step 4a: Your Reminder

 A few minutes before your program comes on, a box will appear on your screen telling you that you have a Reminder.

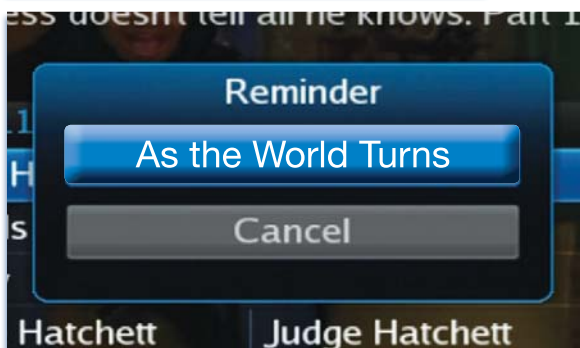

Press **INFO** to display the Reminder.

 Highlight the button showing the program name and press **OK** to watch the program. Highlight **Cancel** and press **OK** to ignore the Reminder.

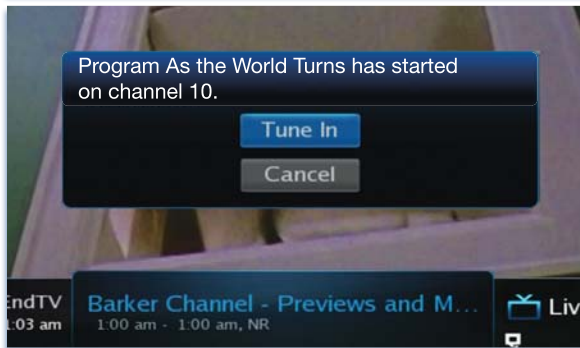

### Step 4b: Your Autotune

Just before the program begins, a message will display, giving you the option to tune in or cancel. If nothing is selected, your TV will automatically tune to the new program.



## Step 4c: Your Recording

 
If you set a future recording, your set top box will record it for you once your program begins (see [7 Recordings](#) for more details).

To watch your recording, go to [8 DVR - Recordings](#).

## Editing a Recording

**Note: Recording is not available if your set top box doesn't support it.**

Once you have created a recording, you can adjust when the recording begins or ends. This ensures nothing is missed in case the broadcaster's time doesn't precisely match up with yours.

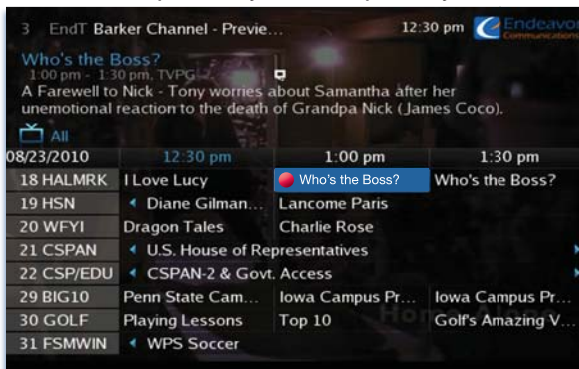


## Step 1: Pick an Upcoming Recording

Locate the program to be recorded. Highlight its listing and press **OK**. You can locate the program by finding it on the Guide or by accessing it through the [To Record](#) option on the DVR menu.



## Step 2: Edit Recording

 From the options shown for this program, highlight [Edit Recording](#) and press **OK**.

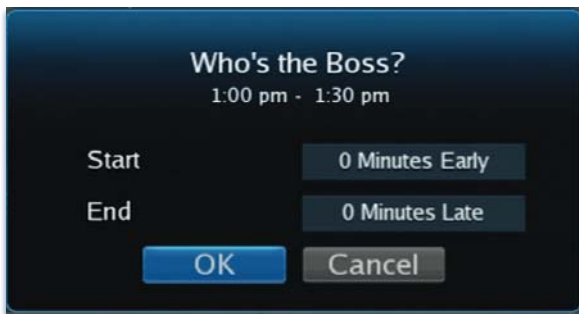

## Step 3: Select Start & End Times

**Arrow Up** or **Down** to choose [Start](#) or [End](#) and press **OK**. Once you see arrows above and below the [Start](#) or [End](#) box, **Arrow Up** or **Down** to adjust the [Start](#) or [End](#) time.

 


## 6 Guide - Alerts & Recordings

### Setting a Series Recording

**Note:** Recording is not available if your set top box doesn't support it.

If you choose to record a program that is part of a regular series, you will be offered the option to record the series. This allows you to record every episode of a favorite program.

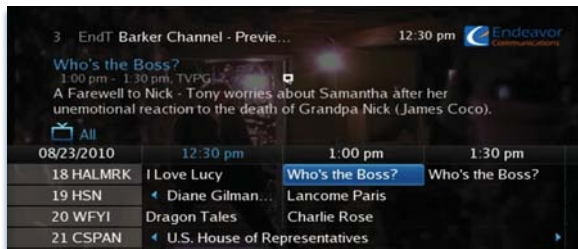

#### Step 1: Pick a Program

Find any episode of the series you want to record. Highlight the program listing and press **OK**.

 


#### Step 2: Set the Recording

Highlight **Record Series** and press **OK**.

#### Step 3: Return To Guide

Once you have set the series recording you will be returned to Guide.

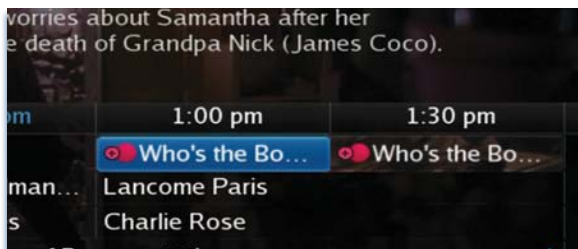

The program listing now shows an icon next to the program's name.



Series  
Recording set

Every upcoming episode of the series will be recorded.



## Editing a Series Recording

**Note:** Recording is not available if your set top box doesn't support it.

Once you have created a series recording, you can adjust several recording preferences in the **Edit Series Recording** menu.



### Step 1: Pick a Series Recording

Locate any program in the series to be recorded. Highlight its listing and press **OK**.

You can locate the program by finding it on the Guide or by accessing it through the **To Record** option on the DVR menu.



### Step 2: Edit Series Recording

From the options shown for this program, highlight **Edit Series Recording** and press **OK**.



### Step 3: Adjust Series Recording Options

**Arrow Up** or **Down** to choose an option and press **OK**. Once you see arrows above and below the options setting box, **Arrow Up** or **Down** to adjust that setting.



## 6 Guide - Alerts & Recordings

**Channels** determines whether the series is recorded when aired on the channel originally set to record, or record the series on whatever channel airs it.

**Preference** determines whether to record the program when shown in standard definition or only when shown in high definition.

**Episodes** determines whether to record re-runs and new episodes of the series or only new episodes.

 
**Start** and **End** determines how much time to add at the start and end time of the recording so that none of the program is missed.

**Limit To** determines how many episodes of the series are saved. If set to anything other than **All**, the system will delete the oldest recorded episode of the series once the limit is reached.

Once you have adjusted the series settings, highlight **OK** and press **OK** to save your changes.

### Skiping an Episode

Once you have created a series recording, you can manually skip any episode.

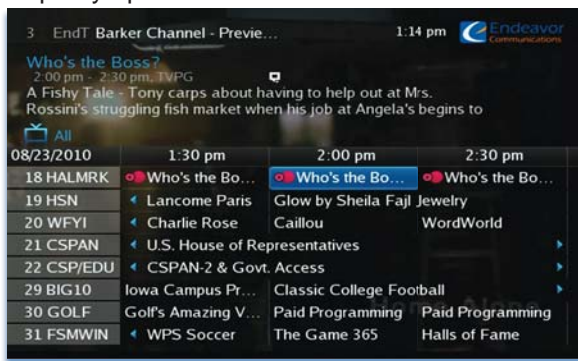


#### Step 1: Pick the Episode

Locate the episode in the series you want to skip. Highlight its listing and press **OK**.

#### Step 2: Skip the Episode

Highlight **Skip Episode**

**Skip Episode**

and press **OK**. You will be returned to Guide and the red dots on the episode listing will turn grey  to indicate you are skipping that episode. If you decide to record this episode after all, repeat this procedure and choose **Record Episode** from the options shown and press **OK**. The dots will become red again.





Operated by  
  
Endeavor  
Communications

## Security Solutions for Home & Business



- ◆ Burglar & intrusion detection
- ◆ Fire detection
- ◆ Control system with mobile device or PC with Total Connect\*
- ◆ Medical emergency notification
- ◆ Wireless live streaming video surveillance
- ◆ Monitored smoke & carbon monoxide detection

**Schedule a visit with an Endeavor sales representative  
for a FREE on-site security quote!**



Available to  
Endeavor  
Members &  
the General  
Public!

\*Internet service required.  
Data usage charges may apply.

**We protect what you value most!**

Call 1.800.922.6677 for a FREE Medical Alert System Quote



# MEDICAL ALERT

www.weEndeavor.com

Enjoy the Freedom of Independent Living!

## MEDICAL ALERT SYSTEM

Wireless Two-Way Voice Pendant

Medical Alert Protection  
in and around the home.



Water  
Resistant  
Pendant!

**BASIC MONITORING**

starting as low as **\$24.95\***/mo.

### Included with system:

- Base station, power adapter & batteries
- Pendant with two rechargeable batteries
- Wrist/Wheelchair strap
- Lanyard & belt clip
- Phone cord



Pendant



Base  
station

Base Station plugs into your telephone jack and allows you to communicate your message within many hundreds of feet of your base station.

System should cover your average home and into the front, back and side yards\*

Emergency personnel are contacted  
with the touch of a button!

**24/7 Monitoring**

Safety and peace-of-mind are just a call away!

Available to Endeavor Members & the General Public!



Medical Alert System requires landline telephone service. \*Installation, equipment and monthly monitoring fees will vary. Emergency Alert Communications requires an additional fee. \*\*The operating range of your system will depend on many factors including interfering radio electrical interference, various appliances such as vacuum cleaners, refrigerators, microwave ovens, mixers, coffee grinders, hair dryers and other sources of electrical noise around the house. Endeavor and E-SHIELD are trademarks of Endeavor Communications.

SCAN TO  
VISIT OUR  
WEBSITE

 







## Canceling an Autotune, Reminder, Recording, or Series Recording

You can cancel any event you have previously scheduled directly from Guide.

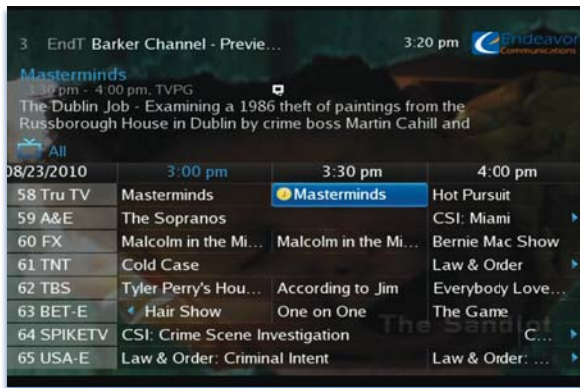

### Step 1: Pick the Program

 Highlight the program with the event you want to cancel and press **OK**.

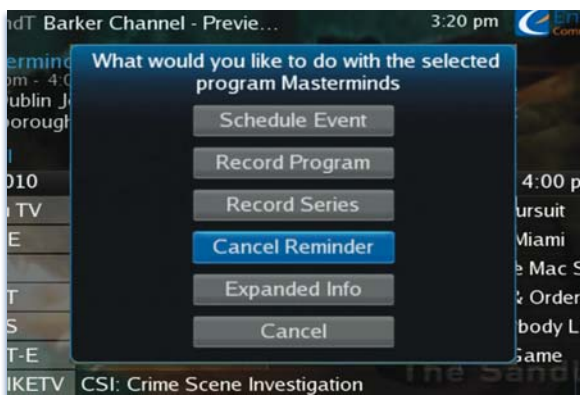

### Step 2: Cancel the Event

Depending on the type of event you are canceling, your options will be:

Cancel Reminder

Cancel Autotune

Cancel Recording

or

Cancel Series

Highlight the option you wish to cancel and press **OK**. A **Yes** or **No** confirmation screen will appear. Highlight **Yes** and press **OK** to confirm.

### Step 3: Return to Guide

After you press **OK**, you will return to the Guide.

## Additional Information on Canceling Events

A list of your Reminders and Autotunes is located in **11 My Library - Reminders** and can be canceled from there.

To cancel scheduled recordings, see **8 DVR - To Record**.

# 7 Recording

## Recordings

Creating recordings and pausing live TV both require a DVR (Digital Video Recorder). In this section, you will learn several other ways to record besides those covered in [6 Guide - Alerts & Recordings](#).

### Quick Recording

The fastest and easiest way to begin recording is to use the **RECORD** button on your remote control.

#### Step 1: Start Recording

While watching a program, press **RECORD**. Recording will begin immediately.



You can also start a quick record in [Guide](#).

Highlight a program you want to record using the **Arrow Keys** and press **RECORD**.

If the program is currently on, recording will begin immediately. The program will be recorded until it is scheduled to finish. To manually stop the recording before it is finished, press **STOP**.

### General Guidelines About Recordings

Your TV can even be turned off and recording will take place.

You can record one program and watch a different live program or recording simultaneously.

Check with your service provider to see additional multiple recording options.

### Pausing Live TV (PLT)

Recording capability also allows you to pause live TV (PLT). While watching a live program, pressing the **Pause** button will temporarily store what you have watched. You can resume watching by pressing the **Play** button. When you use a **Network DVR** you can pause on any TV in the house.

## 7 Recording

 
While watching a recorded program or live TV, you can use the **Playback Control Buttons** to control video playback.

⏸ Press **PAUSE** on your remote control to pause the program. Programs can be paused as long as the current channel is not changed.

▶ Press **PLAY** to resume watching.

⏮ ⏭ Press **REWIND** or **FAST FORWARD** to reverse or advance playback from the current point. Press repeatedly to increase **FAST FORWARD** or **REWIND** speed.

■ Press **STOP** to exit playback of the program.

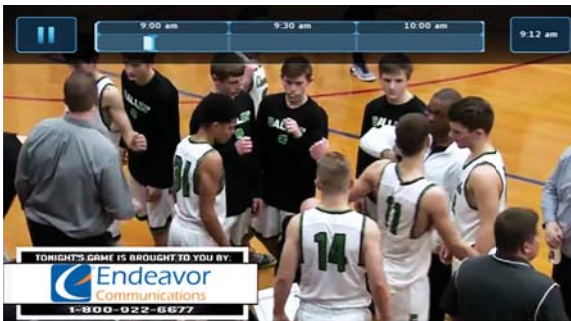


The Pause Live TV bar appears whenever you pause, rewind or fast forward live TV.

The center area indicates the amount of program saved. The “I-bar” shows where you are within that range.

The far left box indicates the current playback function.

The far right box indicates the original time you are at within the program.

### DVR Playback Controller

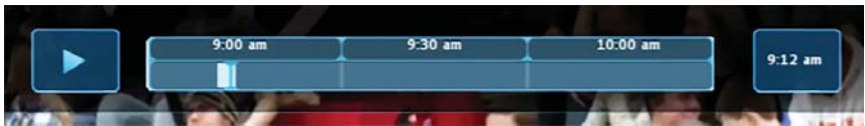 

Any time you press one of the **Playback Control Buttons** while watching a previously recorded program, the DVR playback controller is displayed.

The box to the left indicates the playback function in use.


The bar in the middle gives a visual representation of where you are in the recording.

# 7 Recording
 
## Schedule Event

With **Schedule Event**, you can select the channel, date, start and stop time, duration, and frequency of a recording. It is helpful when you want to record or watch a portion of a program on a reoccurring basis.

### Accessing the Schedule Event Screen

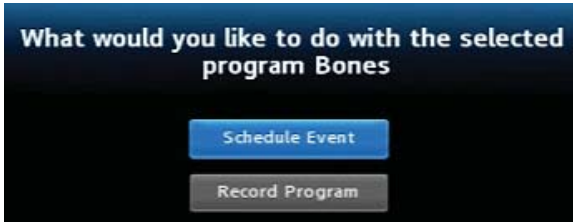

There are two ways to access the screen.

#### Option 1:

When you select a future program in **Guide** and press **OK**, select the **Schedule Event** option from the

 
pop-up menu.

The **Schedule Event** screen is populated from the channel you were watching and will change when you select a future program in the Guide.

#### Option 2:

Press **MENU** on your remote control, navigate to **DVR**, then scroll down to **Schedule Event**, and press **OK**.


### Configuring the Schedule Event Screen

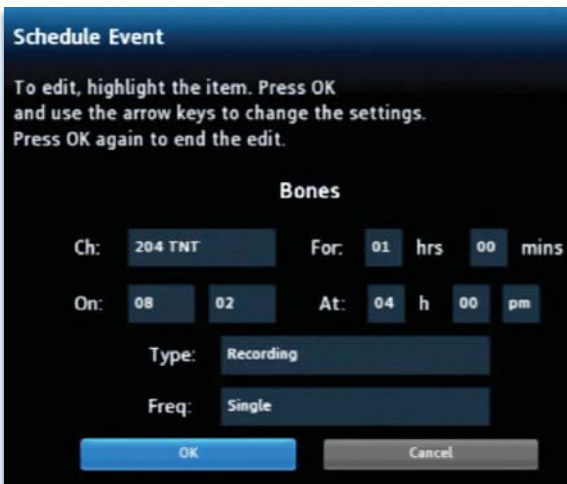

The information (the date, program name, channel, time, and frequency of recording) is listed on the **Schedule Event** screen.

If information is incorrect, highlight it and press **OK**. **Arrow Up** and **Down** on your remote to enter the correct information and press **OK**.

## 7 Recording

 

### Set Type of Event

**Arrow Down** and highlight **Type** and press **OK**. The highlight will become left/right arrows.

**Arrow Left** or **Right** until you see the event type you want (**Recording**, **Autotune**, **Reminder**), then press **OK**.



### Set Event Frequency

**Arrow Down** on your remote and highlight **Freq** and press **OK**. The highlight will become left/right arrows.

**Arrow Left** or **Right** on your remote until you see the frequency you want (**Single**, **Weekly**, **M-F**, **Every Day**), then press **OK**.

**Arrow Down** on your remote and highlight **OK** on the **Schedule Event** screen and press **OK** on your remote. You will be returned to **DVR** menu. Press **Exit** to return to the Guide.

See **8 DVR - Schedule Event** for details on editing the **Schedule Event** screen.

### Record By Search

---

Navigate to the Menubar by pressing the **Menu** button, highlighting the **Search** icon, and press **OK**. (See **15 Search** for complete details on **Search**.)

Once the Search topic is found, navigate to the program you want to record. Then highlight it and press **OK**.

**Arrow Down** to **Record Program** for a one-time recording and press **OK**. Or **Arrow Down** and highlight **Record Series** to record all episodes of the show.

See **15 Search** for more details.

**Note:** To view your recordings, go to chapter **8 DVR - Recordings**.



## 8 DVR

### Introducing DVR

In DVR, you can view current recordings, see a list of future scheduled recordings, edit and cancel recordings, sort and prioritize recordings, lock recordings, and schedule a future event. Schedule Event is the only DVR feature that enables recordings.

### Go To DVR

Press **MENU**, highlight **DVR** and press **OK**.

### The DVR Menu Quick Reference

#### Recordings

**Recordings** lists programs you have already recorded. Go here to watch, sort, lock, or delete these recorded programs.

#### To Record

**To Record** lists all Recording events you have scheduled, and allows you to sort or cancel any future recordings.

#### Schedule Priority

**Schedule Priority** allows you to give priority for one series recording over another in the event of a scheduling conflict.

#### Schedule Event

**Schedule Event** allows you to create a Recording, Reminder, or Autotune event for individual or recurring programs.

#### Record History

**Record History** is a log of when recordings start, complete, or are canceled.

### Recordings



Highlight **Recordings** and press **OK**.


A list of your recorded programs appears to the right.

In the lower right of the info area a percentage full item is shown. This indicates the percentage of total recording space used.

Recordings not yet watched are listed with white text; those you have previously accessed are



listed with grey text. If a program is still being recorded a red dot icon will appear to the left of the program's name.

The Whole Home icon  means that the recorded program can be viewed from any set top box in the house and will appear to the left of the program's name. (See the end of this DVR section for more details about Whole Home DVR.)

## Recordings: Watching a Recorded Program

### Step 1: Pick a Recording

Highlight the recording you want to watch and press **OK**.



### Step 2: Play the Recording

 
Highlight **Play Recording** and press **OK**.

### Step 3: Watch the Recording

Your recording will begin playing. The Infobar will appear for a few seconds with an icon to the right to indicate you are playing a recording.

While watching your recording, you can use any of the **Playback Control Buttons** on your remote to pause, fast forward, rewind, stop, or resume play.

## DVR Playback Controller

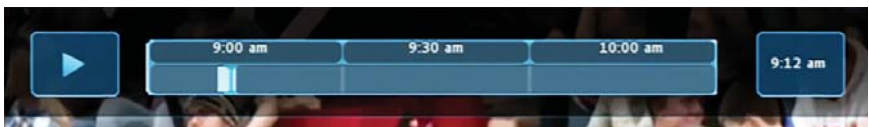

Any time you press one of the **Playback Control Buttons** while watching a previously recorded program, the DVR playback controller is displayed.

The box to the left indicates the playback function is in use.

The bar in the middle gives a visual representation of where you are in the recording.

### Step 4: Return To Live TV

When the recording ends, you will be prompted to keep or delete the recording and then returned to live TV.

If you want to return to live TV before your recording has ended, press **STOP (■)**. See **Playback Controls** on your remote.





## 8 DVR

### Recordings: Sorting Recordings

Highlight **Recordings** and press **OK** to bring up your recording list. The first listing will be highlighted. You can sort your recordings alphabetically by title, by the date recorded, by channel that originally aired the program, or by whether you have or have not viewed the recording.



To sort your recordings by any of those categories, press the **Left Arrow Key** to shift the highlight to the left. Highlight the category you want to use to sort and press **OK**.

For example, if you highlight **Date** and press **OK**, your

recordings will be sorted by the date recorded with oldest at the top and newest at the bottom.

You can reverse the sort order for any category by pressing **OK** again on that category. Using the above example, pressing **OK** again on **Date** would put your newest recordings at the top and oldest at the bottom.

### Recordings: Locking or Unlocking a Recording

Locking a recording prevents the system from deleting a program to make space for new recordings.

**Note: You can still manually delete a locked recording. Locking only prevents the system from automatically deleting it.**


#### Step 1: Pick a Recording

Highlight the recording you want to lock and press **OK**.



#### Step 2a: Lock the Recording

Highlight **Lock** and press **OK**.

Once a program is locked, a  appears on the recording's listing.

#### Step 2b: Unlock the Recording

If you select a locked program in Step 1, the **Lock** option will instead be **Unlock**.





Highlight **Unlock** and press **OK**.

When the program is unlocked, the padlock icon is removed.

### Recordings: Deleting a Recording

#### Step 1: Pick a Recording

Highlight the recording you want to delete and press **OK**.

 


#### Step 2: Delete the Recording

Highlight **Delete Recording** and press **OK**.

#### Step 3: Confirm Delete

Highlight **Yes** and press **OK** to confirm, or **No** if you change your mind.

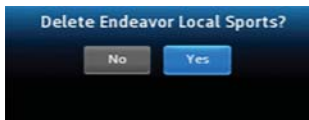

#### Step 4: Recording Successfully Deleted

Once you confirm the deletion, the entry for that recording is removed from the list.

**Note:** Once a recording has been deleted, there is no way to undo this action.

### Recordings: Stopping a Program Currently Recording

#### Step 1: Pick a Recording

Highlight the recording event you want to stop and press **OK**.

#### Step 2: Stop the Recording

Highlight **Stop Recording** and press **OK**.

### To Record

You can easily review and cancel programs to be recorded. Highlight **To Record** and press **OK**.

#### To Record: Sort Future Recordings

A list of your scheduled future recordings will appear to the right.

The list of programs to be recorded can be sorted by title, date to be recorded, channel airing the program to be recorded, or recordings to be skipped or not.

For more information on sorting items in this list, see Sort Recordings earlier in this section.

#### To Record: Canceling a Future Scheduled Recording

##### Step 1: Pick a Future Scheduled Recording

Highlight the recording event you want to cancel and press **OK**.



## 8 DVR

### Step 2: Cancel the Recording Event

Highlight **Cancel Recording** and press **OK**.

### Step 3: Recording Canceled

Once you have canceled the recording event, the entry for that recording event is removed from the list.

### Schedule Priority

When you create series recordings for different programs that may be scheduled for the same time, Schedule Priority allows you to pre-determine which program you want to be recorded instead of another. To go to Schedule Priority, highlight **Schedule Priority** and press **OK**.

#### Schedule Priority: Changing Schedule Priority



Schedule Priority lists all series recordings with the highest priority listed first.

This program will always be recorded in preference to any other series recording.

To adjust the priority for a series, highlight the program you would like to change and press **OK**.

You can **Move Up** or **Move Down** the program in priority. Highlight the option you want and press **OK**. If necessary, repeat this procedure until each series is in the order of priority you want.

### Schedule Event

Highlight **Schedule Event** and press **OK**. Setting a Schedule Event is covered in **7 Recordings**. Editing instructions are covered here.



## Schedule Event: Editing a Schedule Event



You can edit the channel number, date, time, and type of scheduled event, and frequency of the event.

Highlight the setting you want to change by **Arrowing** to the item and press **OK**. Use the **Right and Left Arrow Keys** to change the settings and press **OK** on the remote to end the edit.

When all screens are completed, press **OK** on the screen to enter your information.

## Record History

Record History is a log of all events related to your recordings such as recording started, recording completed or recording canceled. Scroll down the **DVR** listings and highlight **Record History** and press **OK**.

## Record History: Reviewing Record History



Press the **Up and Down Arrow Keys** on the remote to scroll through your record history.

When you **Arrow** to a Recording that is labeled **Record Stop** and push **OK** on your remote, the date and start time of the recording appears above the list of recordings. The same process works for **Record Start**.

## Basic Channels

A & E .....	202	Fox Sports Midwest Plus-Terre Haute .....	24	This TV* .....	110
AMC .....	270	Freeform .....	101	TLC .....	153
Animal Planet .....	154	FX .....	203	TNT .....	204
Antenna TV* .....	111	FX* .....	220	Travel Channel .....	215
BET .....	206	getTV* (formerly LWS) .....	90	truTV .....	201
Big 10 Network Alt. 1 .....	29	Golf Channel .....	39	TV-Land .....	103
Boomerang .....	106	Got It* .....	39	USA .....	208
Bounce* .....	92	Hallmark .....	108	VH-1 Music First .....	302
Bravo .....	221	Hallmark Drama .....	334	VOD Preview .....	999
C-SPAN-1* .....	81	Hallmark Movies & Mysteries .....	271	WAWV-ABC-Terre Haute* .....	38
C-SPAN-2* .....	82	Headline News .....	84	WAWV-ABC-Terre Haute-HD .....	1038
Cartoon Network .....	105	HGTV .....	213	WCLJ-TBN-Bloomington* .....	17
Chiller .....	216	History Channel .....	152	WFYI-PBS-Indianapolis* .....	20
CMT .....	303	HSN* .....	73	WFYI-PBS-Indianapolis* .....	20
CNBC .....	85	Investigation Discovery .....	160	WFYI-PBS-Indianapolis-HD .....	1020
CNN .....	83	ISC Sports Network* .....	1	WGN America .....	200
Comedy Central .....	210	JUCE TV .....	330	WHMB-IND-Indianapolis* .....	7
Comet* .....	93	Justice Network* .....	94	WIPX-ION-Indianapolis* .....	5
COZI TV* .....	112	Laff .....	327	WISH-CW-Indianapolis* .....	8
Daystar .....	326	Lifetime .....	212	WISH-CW-Indianapolis-HD .....	1008
Discovery Channel .....	151	Lifetime Movie Network .....	272	WNDY-Indianapolis* .....	12
Disney Channel .....	104	Lifetime Real Women .....	219	WNDY-Indianapolis-HD .....	1012
Disney Jr .....	107	MeTV* .....	109	WRTV-ABC-Indianapolis* .....	6
ET .....	209	MSNBC .....	86	WRTV-ABC-Indianapolis-HD .....	1006
Endeavor TV* .....	3	MTV .....	301	WTHI-CBS-Terre Haute* .....	10
Enlace .....	329	National Geographic .....	164	WTHI-CBS-Terre Haute-HD .....	1010
ESPN-2 .....	33	NBC Sports Network .....	48	WTHIFox10-Terre Haute* .....	24
ESPN .....	32	NBC Universo .....	218	WTHIFox10-Terre Haute-HD .....	1024
EVINE Live* .....	72	NFL Network .....	34	WTHR-NBC-Indianapolis* .....	13
Food Network .....	214	Nickelodeon/Nick at Night .....	102	WTHR-NBC-Indianapolis-HD .....	1013
Fox Business Network .....	88	Nick Music .....	304	WTU-PBS-Bloomington* .....	21
Fox News Channel .....	87	Oxygen .....	225	WTU-PBS-Bloomington-HD .....	1021
Fox Sports 1 .....	40	Paramount Network .....	207	WTVV-CBS-Indy* .....	4
Fox Sports 2 .....	52	QVC* .....	71	WTVV-CBS-Indy-HD .....	1004
Fox Sports Midwest-Indianapolis-HD .....	1031	SOAC .....	331	WTTV2* .....	91
Fox Sports Midwest-Indianapolis .....	31	Syfy .....	211	WTV2-NBC-Terre Haute* .....	2
Fox Sports Midwest-Terre Haute-HD .....	1026	TBS .....	205	WTV2-NBC-Terre Haute-HD .....	1002
Fox Sports Midwest-Terre Haute .....	26	The Blaze .....	80	WXIN-Fox-Indianapolis* .....	11
Fox Sports Midwest Plus-Indianapolis .....	28	The Hillsong Channel (formerly Church Channel) .....	328	WXIN-Fox-Indianapolis-HD .....	1011
		The Weather Channel .....	89		

## Premier Channels

American Heroes Channel .....	158	Fox College Sports-Atlantic .....	45	MTV-2 .....	306
BBC America .....	223	Fox College Sports-Central .....	46	MTV Classic .....	308
CMT Music .....	307	Fox College Sports-Pacific .....	47	Nat Geo WILD .....	155
Cooking Channel .....	229	FUSE .....	310	Nick Jr .....	115
Crime & Investigation .....	168	Fusion .....	230	Nick Toons .....	114
Destination America .....	161	FX Movie Channel .....	273	OWN .....	162
Discovery Family .....	117	FY .....	1671	RFD TV .....	226
Discovery Life .....	163	Great American Country .....	305	SEC Network .....	49
Disney XD .....	113	GSN (Game Show Network) .....	222	SEC Network Alt. 1 .....	50
DIY .....	166	H-1 Soul .....	309	TEENick .....	116
ESPN Class .....	41	The Science Channel .....	159	Turner Classic Movies .....	275
ESPN News .....	42	IFC .....	274	Universal Kids .....	118
ESPN .....	43	INSP .....	333	Viceland .....	157
EWTN .....	332	Military History .....	156	Youtoo .....	224

\*Local Plus Channels

\*Call 1.800.922.6677 about  
Endeavor's Local Plus  
TV channels.



Endeavor  
Communications

Channels subject to change without prior notice. To change your subscription call 1-800-922-6677. Visit [www.wendevor.com](http://www.wendevor.com) or Endeavor TV channel 3 for up-to-date channel information.

\*Members who subscribe to the Showtime/TMC/Xtra Movie package, HBO, Cinemax or Encore/Starz Movie package, must also subscribe to the HD package to receive Premium HD Movie Channels.

## Premier HD Channels

A & E-HD	1202	Fox Business Network-HD	1088	NBC Sports Network-HD	1048
AMC-HD	1270	Fox News Channel-HD	1087	NBC Universo-HD	1218
American Heroes Channel-HD	1158	Fox Sports 1-HD	1040	NFL Network-HD	1034
Animal Planet-HD	1154	Fox Sports 2-HD NEW!	1052	Nickelodeon/Nick at Night-HD	1102
BBC America-HD	1223	Freeform-HD	1101	Nick Jr-HD	1115
BET-HD	1206	Fusion-HD	1230	Nick Toons-HD	1114
Big 10 Network-HD	1029	FX-HD	1203	OWN-HD	1162
Bravo-HD	1221	FX Movie Channel-HD	1273	Oxygen-HD	1225
Cartoon Network-HD	1105	FXX-HD	1220	QVC-HD	1071
CMT-HD	1303	FYI-HD	1167	Red Zone-HD**	1035
CNBC-HD	1085	Golf Channel-HD	1030	SEC Network-HD	1049
CNN-HD	1083	GSN (Game Show Network)-HD	1222	SEC Network Alt. 1-HD	1050
Comedy Central-HD	1210	Hallmark-HD	1108	Paramount Network-HD	1207
Cooking Channel-HD	1229	Hallmark Drama NEW!	1334	Syfy-HD	1211
Crime & Investigation-HD	1168	Hallmark Movies & Mysteries-HD	1271	TBS-HD	1205
Destination America-HD	1161	Headline News-HD	1084	The Science Channel-HD	1159
Discovery Channel-HD	1151	HGTV-HD	1213	TLC-HD	1153
Discovery Family-HD	1117	History Channel-HD	1152	TNT-HD	1204
Disney Channel-HD	1104	IFC-HD	1274	Travel Channel-HD	1215
Disney Jr-HD	1107	Investigation Discovery-HD	1160	truTV-HD	1201
Disney XD-HD	1113	Lifetime-HD	1212	Turner Classic Movies-HD	1275
DIY-HD	1166	Lifetime Movie Network-HD	1272	TV Land-HD	1103
E!-HD	1209	MSNBC-HD	1086	Universal-HD	1276
ESPN-2-HD	1033	MTV-2-HD	1306	USA-HD	1208
ESPN-HD	1032	MTV-HD	1301	Velocity-HD	1036
ESPN News-HD	1042	Nat Geo WILD-HD	1155	VH-1 Music First-HD 1	302
Food Network-HD	1214	National Geographic-HD	1164	Viceland-HD	1157

## Premium Movie Channels

5 Star Max	449	HBO Zone	409	STARZ Cinema	474
Action Max	443	MAX Latino	451	STARZ Comedy	476
Action Max West	444	MoreMax	445	STARZ Edge	472
Cinemax	441	MoreMax West	446	STARZ ENCORE	431
Cinemax West	442	MovieMAX	453	STARZ ENCORE Action	432
FLIX	422	Outer Max	447	STARZ ENCORE Black	435
HBO-2	403	Showtime 2	413	STARZ ENCORE Classic	433
HBO-2 West	404	Showtime	412	STARZ ENCORE Family	437
HBO	401	Showtime Beyond	416	STARZ ENCORE Suspense	434
HBO Comedy	411	Showtime Extreme	415	STARZ ENCORE Western	436
HBO Family	405	Showtime FamilyZone	419	STARZ In Black	475
HBO Family West	406	Showtime Next	418	STARZ Kids & Family	473
HBO Signature	407	Showtime Showcase	415	The Movie Channel (TMC)	420
HBO Signature West	408	Showtime Women	417	The Movie Channel Xtra	421
HBO West	402	STARZ	471		

## Premium HD Movie Channels

5 Star Max-HD+	1149	MovieMax-HD+	1453	STARZ Edge-HD+	1472
Action Max-HD+	1443	Outer Max-HD+	1447	STARZ ENCORE-HD+	1431
Cinemax-HD+	1441	Showtime-HD+	1412	STARZ ENCORE Action-HD+	1432
HBO-2-HD+	1404	Showtime 2-HD+	1413	STARZ ENCORE Black-HD+	1435
HBO-HD+	1401	Showtime Beyond-HD+	1416	STARZ ENCORE Classic-HD+	1433
HBO Comedy-HD+	1411	Showtime Extreme-HD+	1415	STARZ ENCORE Suspense-HD+	1434
HBO Family-HD+	1405	Showtime Next-HD+	1418	STARZ In Black-HD+	1475
HBO Signature-HD+	1407	Showtime Showcase-HD+	1414	STARZ Kids & Family-HD+	1473
HBO Zone-HD+	1409	Showtime Women-HD+	1417	The Movie Channel (TMC)-HD+	1420
Max Latino-HD+	1451	STARZ-HD+	1471	The Movie Channel Xtra-HD+	1421
MoreMax-HD+	1445	STARZ Comedy-HD+	1476		

## Music Channels

Adult Alternative	918	Light Classical	952	Romances	942
Alternative	917	Love Songs	922	Singers & Swing	949
Blues	948	Max	904	Smooth Jazz	946
Classical Masterpieces	951	Metal	916	Soft Rock	921
Classic Country	936	Mexicana	940	Solid Gold Oldies	932
Classic Rock	920	Musica Urbana	939	Soundscapes	945
Contemporary Christian	937	Party Favorites	924	Sounds of the Seasons	943
Country Hits	935	Play	902	Stage & Screen	944
Dance/EDM	905	Pop & Country	933	Ten Beats	925
Easy Listening	950	Pop Hits	923	Throwback Jamz	910
Gospel	913	Pop Latino	938	Today's Country	934
Hip-Hop and R&B	907	R&B Classics	911	Toddler Tunes	927
Hip-Hop Classics	909	R&B Soul	912	Tropicales	941
Hit List	903	Rap	908	Y2K	928
Indie	908	Reggae	914	'70s	931
Jazz	947	Rock	915	'80s	930
Kids Only	926	Rock Hits	919	'90s	929
Adult PPV	802	PPV	885		
Adult PPV	804	PPV Event Preview Channel	484		
Adult PPV	806				

PPV

\*\* Subscriber-only seasonal package.

 


## 8 DVR

### Whole Home DVR

As the name suggests, with Whole Home DVR all set top boxes in the household can record programs and view live or pre-recorded shows from any room in the house. You can also stop a recorded program in one room and continue watching it in another.

### Set a Recording

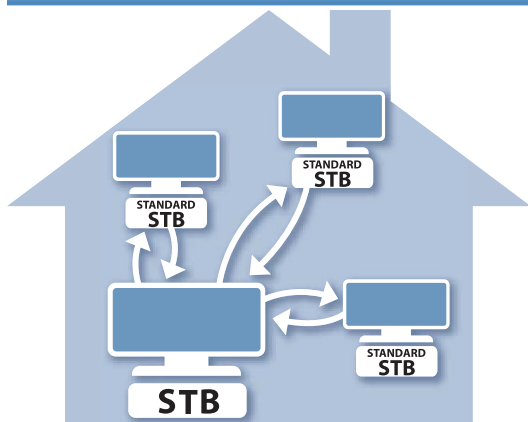


You can set a recording from connected set top boxes in the household, not just the DVR. Of course, you need one DVR in the household because it actually does the recording and storing functions for all the non-DVR set top boxes. (See [6 Guide - Alerts & Recordings](#) and [7 Recording](#) for more details about recording.)

S

### Non-DVR Set Top Box Recordings List



To view the list of Whole Home DVR recordings go to the Menubar, select the **DVR** icon and press **OK** on your remote. **Recordings** appears as the first listing under **DVR**. Select it and press **OK** to bring up the list. When viewing the list of Whole Home DVR recordings on a

non-DVR set top box, the Whole Home icon  will appear next to the program's name. All set top boxes (including the DVR) will have access to the recording.

# WatchTVEverywhere

As a subscriber to Endeavor E-TV services you get access to WatchTVEverywhere. This value-added service allows you to watch select TV programs anywhere from your mobile devices such as smartphones, tablets, laptops and even desktops.



***It is FREE! You only need to have a subscription to the network you want to watch.***



***WatchTVEverywhere works anywhere you can receive an Internet signal\*: inside your house, at the office, shopping mall, hotel, airport, vacation home, etc.***



***It includes live TV for some channels & has full episodes of current TV shows.\*\****

## How to register for WatchTVEverywhere

1. Visit [www.watchtveverywhere.com](http://www.watchtveverywhere.com) & click on "Register". Keep your account number ready & the correct spelling of the last name on the account.
2. Fill out the new user information. The email address you entered will be your username. Then, click on "Register".
3. Your WatchTVEverywhere activation link will be emailed to you. Click the link to complete the registration process & start enjoying WatchTVEverywhere.

**Register Today!**



**Endeavor**  
Communications  
[www.weEndeavor.com](http://www.weEndeavor.com)

\*The quality of WatchTVEverywhere signals while roaming (airports, stores, etc.) will vary depending on the strength of the signal. Data usage and roaming charges may apply. Flash-enabled browsers required to watch TV programs. \*\*Programming availability may vary.



# MISSED THE MOVIE? NEVER AGAIN.

## START, REWIND, FAST-FORWARD AND PAUSE HUNDREDS OF MOVIES WHEN YOU WANT.

With ON DEMAND, movies are just that – available on demand. You decide when your movie starts, and when it stops. You can also use your remote to pause, rewind and fast-forward – all without a DVD player! Just order a movie, it's yours for 24 hours. Catch the latest movies, many available the same day as the DVD, all without having to leave the house.

▶▶ ONDEMAND IS HERE

## NOW THE ONLY MOVIE SCHEDULE THAT MATTERS IS YOURS

# RENT NOW!

Visit [www.weEndeavor.com/television](http://www.weEndeavor.com/television) and click on TV Options to view the current or upcoming Video on Demand movie schedules



TV On Demand: User's Guide



Endeavor is proud to offer its customers TV On Demand! Watch your favorite TV shows on your own schedule\*. Catch up on episodes or seasons at your own leisure, so you never miss out.

### Watching Your TV On Demand Service

**Step 1:** Using your TV remote control, press the **MENU** button

**Step 2:** Select **TV On Demand** using the arrow keys from the menu options, then press **OK**

**Step 3:** Select a channel using the arrow keys, then press **OK**

**Step 4:** Select a show you want to catch up on using the arrow keys, then enjoy your show by pressing **OK**

#### AVAILABLE NOW ON TV On Demand

 


\*Certain restrictions apply. Channel availability dependent on TV package subscription selection. Programming subject to change without prior notice. Fiber service is required for television service. Service available to local Endeavor Communications customers only.

## Watching from Room to Room

Stop program in  
family room


Continue watching  
in bedroom

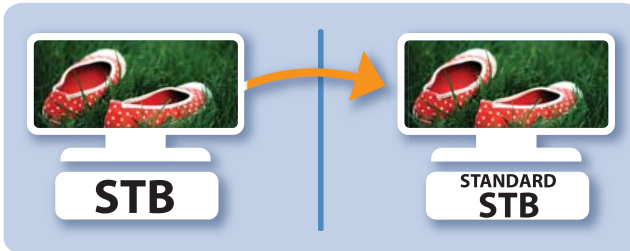

If you start watching a recorded program in one room (family), and wish to move to another room (bedroom) you can view the recording there.

**Step 1:** Stop the recording playing in the family room by pushing the **stop button** on your remote. (See the **Playback Controls** on your remote).

 A screen will appear giving you a choice to either **Keep this Recording** (highlighted) or **Delete this Recording**. Click **OK** on the highlighted **Keep this Recording**. You will then be returned to the **DVR** screen and the video will now be available in other rooms.

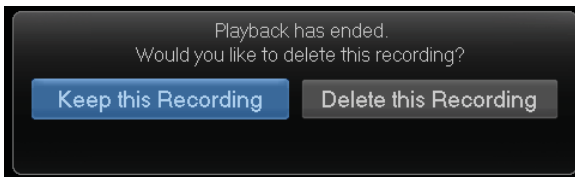

**Step 2:** Go to the bedroom's TV, turn it on, bring up the Menubar and scroll to **DVR**. The first heading under **DVR** is **Recordings**.

**Arrow** over to the recording you had been watching, and push **OK**. A screen will appear giving you the choices of **Play Recording**, **Resume Play**, **Lock**, **Delete Recording**, and **Cancel**.

Scroll to **Resume Play** and press **OK** on the remote to resume watching the video.

# Community Partner

We work here - live here - give here



# Community Partner

We work here - live here - give here



Endeavor is proud to be able to give back to the communities we serve covering eight counties including the towns of **Atlanta, Cloverdale, Coatesville, Eminence, Monrovia, Mt. Meridian, Patricksburg, Poland, and Reelsville.** Endeavor is also expanding services into the **Town of Mooresville and Hendricks County** and look forward to extending our outreach to these areas.

## Local Schools

- ▶ Live streaming and video replay of High School: Football, Basketball, Baseball, Softball & Volleyball
- ▶ 12 Cedric Ray Memorial Scholarships awarded annually
- ▶ 2 FRS Youth Tour Awards presented annually
- ▶ Support of student engagement & academics
- ▶ Free Wi-Fi for local High School outdoor Athletics Events
- ▶ Provide "Feed the Team" snack items for Local Athletes
- ▶ Bottled Water distribution for extracurricular events
- ▶ Athletic and Academic sponsorships
- ▶ FREE school scheduling APP
- ▶ Support of Back to School Events
- ▶ Distribution of Spirit Items and Refreshments at Football & Basketball Tailgating events

## Local Youth Programs

- ▶ Endeavor Speed Geeks Apprenticeship Program
- ▶ Support of local youth athletics, 4-H & FFA programs
- ▶ Support of local Girl Scouts & Boy Scouts

## Community Outreach

- ▶ Free customer appreciation FunFest event on grounds of Endeavor Communications
- ▶ Free Santa's Workshop customer appreciation holiday event
- ▶ Support of local 4-H Fairs and student 4-H programming
- ▶ Title sponsorship of Putnam County & Tipton County Fairs
- ▶ Main sponsor of annual Monster Dash 5K Family Walk/Run in support of Cancer Research
- ▶ Support of local Food Pantries & Clothe-a-Child programs
- ▶ Blood Drive donations
- ▶ Support of local FFA
- ▶ Support of local Senior Centers
- ▶ Support of local First Responders
- ▶ Sponsorship of local Festivals and Events
- ▶ Endeavor Employees Volunteer over 1,000 Community Hours Annually
- ▶ Active in local Chambers of Commerce



For more information on Endeavor Community outreach, please contact **Kathy Morgan** at **800.922.6677** or visit [weEndeavor.com/about-us](http://weEndeavor.com/about-us).



Have No Fear. Endeavor is Here.



# 9 Pay Per View

## Introducing Pay Per View (PPV)

Pay Per View allows you to watch exclusive sporting events and other content in the comfort and privacy of your home. Forget long lines, big crowds, expensive concessions or seats in the “nose bleed” section.

## Go To Pay Per View

Using the **Arrow Keys** on your remote, scroll the menubar to **PPV**, then press **OK**. The PPV list will appear on the Guide menu.

## Buying Pay Per View

 


*Note: Use these steps to purchase PPV Events. (PPV sports and movies are purchased the same.)*

### Step 1: Pick the Program

Highlight the Pay Per View program you

want to buy in **Guide** and press **OK**.

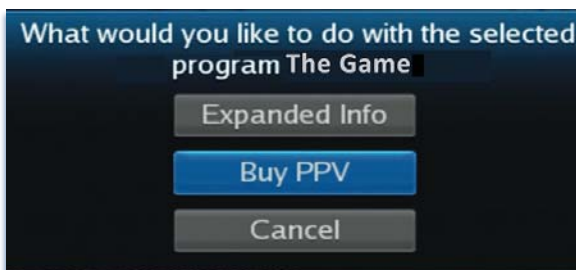

### Step 2: Buy PPV

 
Highlight **Buy PPV** and press **OK**.





## Step 3: Confirm Your Purchase

Highlight the box next to **Enter PIN** and enter your Pay Per View PIN using the **Number Pad (0-9)**. For more information on PINs, see section **12 Settings**.

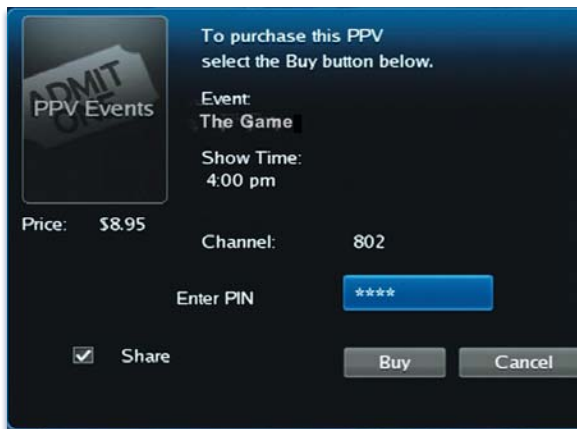

To share this video with other viewers in your household, highlight the check box next to **Share PPV** and press **OK**.

For more information on **Share PPV**, see section **12 Settings**.

Finally, highlight the **Buy** button and press **OK**.

## Step 4: Watch Your Pay Per View



You can now watch your Pay Per View program.

If you purchased your Pay Per View program in advance, you can schedule an Autotune or Reminder so that you don't miss it.

For more information on setting Reminders and Autotunes, see **Setting a Reminder, Autotune, or Recording** earlier in **6 Guide - Alerts & Recordings**.



# 10 Movies On Demand

## Introducing Movies On Demand

 
Movies On Demand provides access to VoD (Video on Demand) movies and programs. You can pause, rewind or fast forward during viewing.

## To Access

Press **Menu** on the remote control. Use the **Arrow Keys** to highlight **Movies On Demand**. Press **OK**.

## Getting Around Movies On Demand

Rentals are grouped into categories for easier navigation. The main category selections are on the top of the screen and the listings of that category are displayed below.

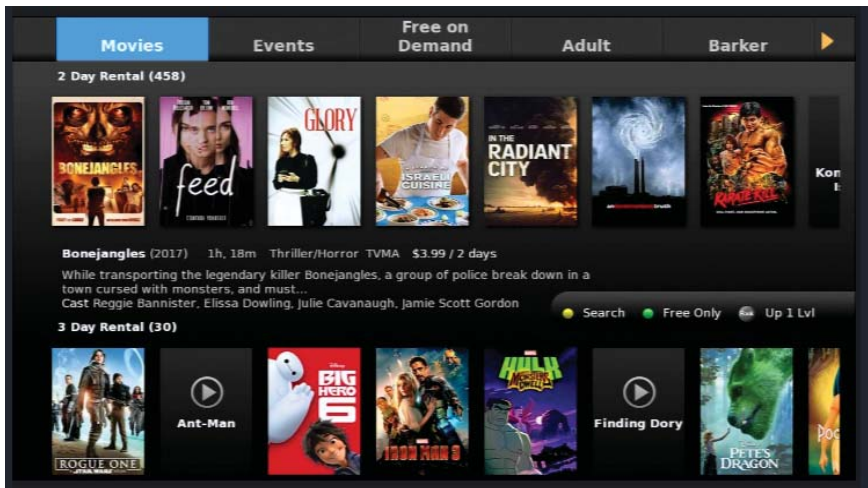

Using your **Arrow Keys**, select a main category by highlighting its tab at the top, and press **OK**.

Use the **Arrow Keys** to highlight a rental listing within that category. Information for that listing will be displayed below its title.







## Bringing Up the Play Menu

Bring up the **Play** menu options by pressing **OK** on your remote. **Play** options may vary by rental listing.

If the program is free or already paid for, the following options can appear:



Highlight an option and press **OK** on your remote.

**Play:** Plays the video.

**Play From Last:** Resumes the video from where you left off.

**More Info:** Displays rental information like title, expiration date, and video length.

**View Trailer:** Plays the movie trailer when available.

**Cancel:** Exits from the **Play** menu options.

## Play a Program & Add It to My Library

Once you rent a program, it will also be temporarily added to your **Video** playlist under the **My Library** icon for the duration of the rental period. (see **11 My Library - Go To Rented Videos** for more information).

## Rent a Program

To rent a movie, highlight the program and press **OK** on your remote. This will bring up the program's play options. Highlight the price button (example **\$1.99 / 2 day**) and press **OK**.





# 10 Movies On Demand

 
Depending on your customized settings, you may see a window asking for your PIN code. Enter your PIN code (PIN is the number zero “0” by default) and press **OK**. See [13 Settings - Working With Settings/Users](#) for adding or editing a PIN code.



Once the confirm button is highlighted, press **OK**. The movie will then begin to play. You can use the **Stop**, **Pause**, **Rewind**, **Fast Forward** and **Play** buttons on the remote control anytime during the movie.

## Movies On Demand Browse & Search Options

The yellow (●) button and green (●) button will change functions depending on which menu screen you are on. When you begin browsing [Movies On Demand](#) programs, the yellow (●) button will say **Search**, and the green (●) button will say **Free Only**.

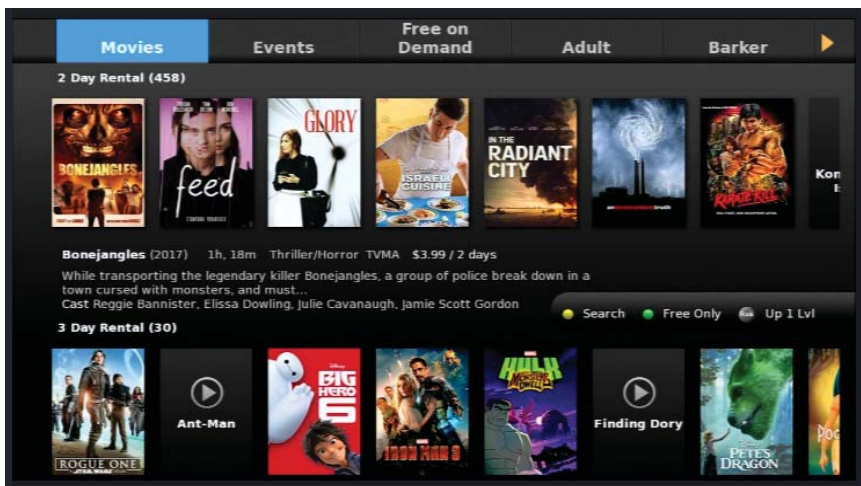


Press the yellow (●) button on your remote to bring up the on-screen



keypad. Using your **Arrow Keys**, enter the program title or portion of the title to be searched.

 When complete, **Arrow** to **Search** and press **OK**. The menu screen will show your search results.

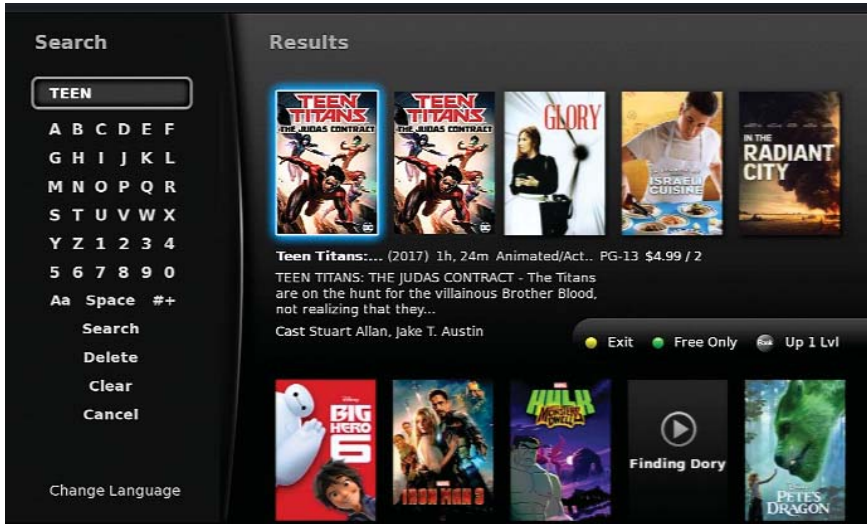

When the on-screen keypad is up, the yellow (●) button will change to say **Exit**. Press the yellow (●) button on your remote to **Exit** the keypad.

The green (●) button on the Movies On Demand menu screen will toggle between showing **Free Only** programs and **All Movies**, and is accessed by pressing the green (●) button on your remote. When you toggle these options, the Movies On Demand menu screen itself will change and show **Free Movies** and then **All Movies** (which include paid movies).

## Stop a Video and Exit Movies On Demand

If you wish to exit the video, press **STOP** on your remote to return to the last Movies On Demand menu screen viewed.

To exit the **Movies On Demand** menu screen and return to live programming, press **EXIT** on your remote.



## 11 My Library

### Introducing My Library

---

My Library stores all purchased programming, a list of your scheduled Reminder and Autotune events, messages about your service, and a log of your Caller ID.

### The My Library Menu

---

#### Video

**Video** provides access to your VOD Rentals you have purchased from Movies On Demand.

#### PPV Events

**PPV Events** allows you to view previously purchased concerts, sporting or other Pay Per View programs.

#### Pay Per Block

**Pay Per Block** allows to purchase special programming in blocks of time such as weekly or monthly.

#### Sports Packages

**Sports Package** allows you to access all programming for any seasonal sports subscription package you have purchased.

#### Reminders

**Reminders** lists all Reminders and Autotune events you have scheduled. From here, you can cancel a Reminder or Autotune.

#### Messages

**Messages** allows you to view any messages about your service. Messages may inform you of promotional offers, upcoming Video On Demand events, service upgrades, or billing alerts.

#### Caller ID

**Caller ID** offers access to a log of all calls you have received through Caller ID. You can review your Caller ID history and delete individual entries.

### Go To My Library

---

Press **MENU** on your remote control, highlight **My Library** and press **OK**.

 
### Go To Videos

---

Scroll down to **My Video** highlight and press **OK**. A list of your active **VOD** Rentals appears to the right.



## Watching a Movies On Demand Video Rental

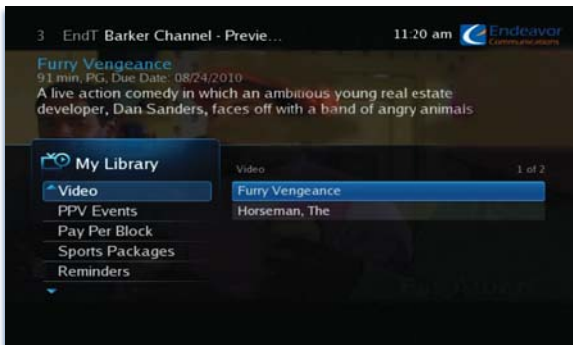

### Step 1: Pick Your Video Rental

Highlight your Video Rental and press **OK**.



### Step 2: Play Your Rental

Highlight **Play From Start** and press **OK** to start playing at the beginning.

If you have already watched part of the program and want to pick up where you left off, highlight **Play From Last** and press **OK**.

## Introducing PPV Events

PPV Events allows you to view a previously purchased program.

### Go To PPV



**Arrow** down to your topic and press **OK**. All purchased Pay Per View programs are listed to the right. Highlight the event you want to watch and press **OK** for information and viewing options.



# 11 My Library

## Introducing Reminders

Reminders lists all scheduled Reminders and Autotune events. From here you can cancel a Reminder or Autotune.

## Go To Reminders

Highlight **Reminders** and press **OK**.

A list of your Reminders  and Autotunes  appears to the right.

## Cancel a Reminder or Autotune



### Step 1: Pick the Program

Highlight the Reminder or Autotune event you want to cancel and press **OK**.



 
### Step 2: Cancel the Autotune or Reminder

Highlight **Cancel Autotune** or **Cancel Reminder** depending on the type of event you are canceling and press **OK**.



## Introducing Messages

Messages may inform you of promotional offers, upcoming Video On Demand events, service upgrades or billing alerts.

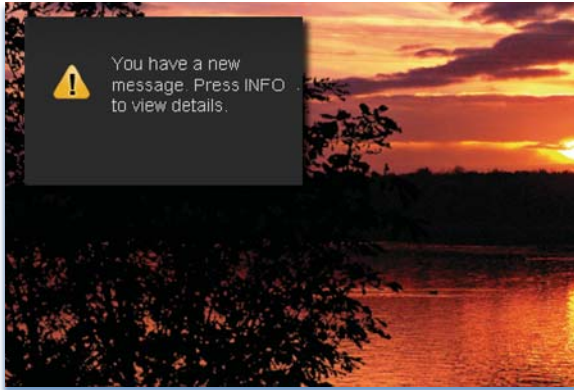


Whenever you receive a new message an alert will appear on your screen. Press **INFO** on your remote to display the message, or press **EXIT** to ignore the alert and view the message later.

## Go To Messages

 Highlight **Messages** and press **OK**.

A list of all available messages appears to the right.

## Reading a Message

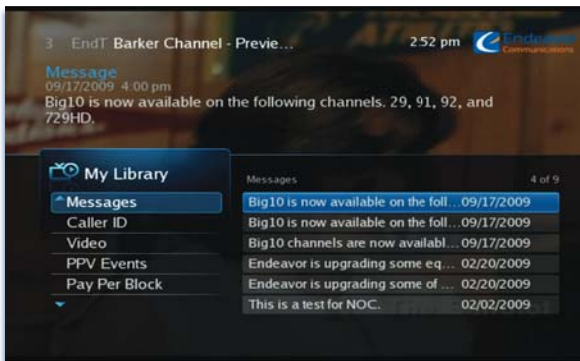

Highlight the message listing you want to read. The full message will be displayed in the Info area.

## Introducing Caller ID

Caller ID offers access to the Caller ID call log. You can review log entries and delete individual entries.



 


## 11 My Library

**Note:** You must subscribe to **Caller ID** to access this feature. Additionally, only certain set top boxes support on-screen Caller ID. Please contact customer service for more information.

Whenever you receive a call, an alert will appear in the upper corner of your screen. This alert will be removed after a few seconds. These settings can be controlled from the **Preferences** in the **Settings**.

### Go To Caller ID

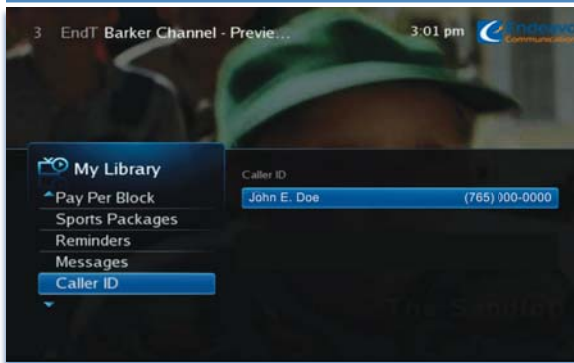

Highlight **Caller ID** and press **OK**.

A list of received calls appears to the right.

Highlighting a Caller ID log entry will display the name and number of the caller, and the date and time of the call.

### Deleting a Caller ID Entry

Highlight the Caller ID listing you want to delete and press **OK**.

Highlight **Delete** and press **OK** to remove the entry, or **Cancel** if you decide to keep it.



## Introducing Settings

**Settings** gives you control over your video service. You can choose to share purchased programs, change how alerts appear on your screen, create parental controls and block programs by channel or ratings. You can also create accounts for members of your family.

## Go To Settings

Press **MENU** and highlight **Settings**. Then enter your password, highlight **OK** and press **OK**. There are two main sections of **Settings: Preferences** and **Users**. Both are used for setting up parental controls.

## Activating Parental Control



**Arrow** to **Parental Control** under **Main Preferences** and press **OK** to check the box. **Arrow** to **Submit** and press **OK**. You will be returned to live TV. Navigate back to **Settings** and enter your account password.

## Selecting Parental Control Settings



**Arrow Down** to **Users** and press **OK**. **Arrow Right** and highlight **Parental Control** and press **OK**.

A new screen appears listing the **Parental Control** topics.

**Arrow Up** and **Down** to check the controls you want to set for your household.

Both **Movie** and **TV Ratings** should be set. Setting one will not block the



## 12 Settings

other's content as they have different rating values. For more information about **Movie** and **TV Ratings**, see the ratings definitions in the appendix of this guide.

Movie and TV ratings determine the highest rating for programs that will be accessible. All levels above the selected rating will be blocked.

### Unlock Timeout (Only Available on Master Account)

Unlock Timeout determines how long parental controls will remain disabled.



To set Unlock Timeout, highlight the option box next to **Unlock**

 
**Timeout** and press **OK**. Use the **Right/Left Arrow Keys** to select the amount of time wanted, then press **OK**.



### Block Unrated (Only Available on Master Account)

Block Unrated allows or blocks any program that does not have a rating.

To turn Block Unrated on or off, highlight the check box and press **OK**.

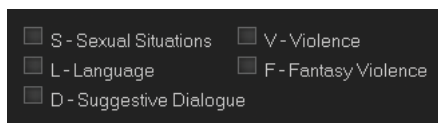


### Content Rating

To block a particular type of content, highlight the check box to the left of that item and press **OK**.

**Note: If you block unrated programs with parental control settings, you may be blocking a sports or news program that isn't rated.**


### Turning Parental Controls On and Off

 Once you have finished your selections, **Arrow Down** to **Submit** and press **OK**. Parental Controls will now be turned on. To turn off Parental Controls, go to **Guide** and select the **Restricted** program replacing the program's title, highlight, and press **OK** on your remote.

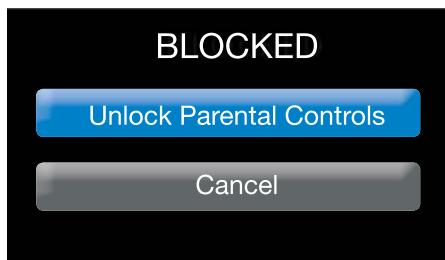

A dialog box pops up that says **Unlock Parental Controls** and **Cancel**.

 If you choose **Unlock Parental Controls**, you're then prompted for your password and parental controls are unlocked for the duration specified by the **Unlock Timeout** feature.

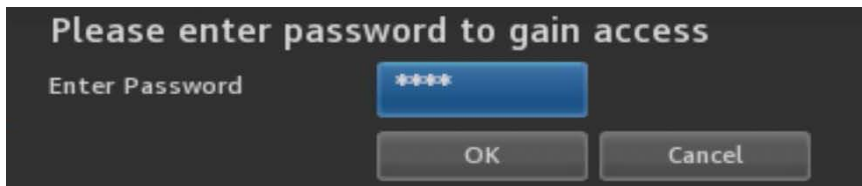


You set the amount of time you want for the **Unlock Timeout** to be in effect under the **Parental Controls** settings as explained earlier in this section. To turn Parental Controls off indefinitely, uncheck the check box marked **Parental Controls** in **Settings Preferences** and press submit.

## Working With Additional Preferences
 
### Share Rentals


Share Rentals makes purchased programs available for any user (enabled), or only available to the user who makes the purchase (disabled).



To turn on or off, highlight the check box and press **OK**. Checked rentals will appear on purchase screens.

### Require Login

 
Require Login determines if a user name and password must be entered before being able to use your TV service.



To turn Require Login on or off, highlight the check box and press **OK**. This ensures that the additional users or sub accounts must log in to watch programs.

### Enable Caller ID

 
Enable Caller ID turns on or off screen alerts for incoming Caller ID.



To turn Enable Caller ID on or off, highlight the check box and press **OK**.

### Caller ID Timeout

 Caller ID Timeout determines how long Caller ID notifications remain on the screen.



To set Caller ID Timeout, highlight the option box to the right of **Caller ID Timeout** and press **OK**. Then press the **Right or Left Arrow Key** to rotate to the amount of time you want the alert displayed, then press **OK**.

### Channel Blocking

Channel Blocking enables or disables the list of channels you have blocked. Blocked channels do not appear in Guide.



## 12 Settings

☐ Channel Blocking

To turn Channel Blocking on or off, highlight the check box and press **OK**.

To edit the list of channels that are blocked, highlight the **Edit** button and press **OK**.

**Channel Blocking Edit** displays a list of all channels available. You can then block or unblock any channel. Blocked channels will appear with a padlock icon next to them in the Edit screen, but WILL NOT APPEAR in channel lineup. Parental Control does not need to be turned on for this feature to be active.

☐ Channel Blocking

To block channels, highlight the **Channel Blocking Edit** button and press **OK**.

If no changes have been made on the **Preferences** screen, you will go directly to the list of all available channels. If any changes *have* been made to the main **Preferences** screen and you have not already updated them, a **Save Changes** box will appear. Highlight **YES** and press **OK** if you wish to save these changes. The **Settings Successfully Updated** notice will then appear. Highlight **OK**, and press the **OK** button.



The **Channel Blocking** list will appear.

To block/unblock a channel, highlight the channel entry and press **OK**. A blocked channel will have a padlock icon on the right side of the channel name.

To go to the next screen of channels,

press the **Up or Down Arrow Key**. When complete, **Arrow** to update and press **OK**.



## Autotune Alert

Autotune Alert determines how early an Autotune alert will appear prior to the beginning of the selected program.

Autotune Alert

0 seconds

To set Autotune Alert, highlight the option box to the right of **Autotune**

**Alert** and press **OK**. Then press the **Right or Left Arrow Key** to display **0 seconds**, **30 seconds**, **2 minutes** or **5 minutes**, then press **OK**.

0 seconds will display your Autotune Alert at the exact time the program begins, where setting to 1 minute will alert you one minute before you program begins.

## Theme

Theme

Default

Theme allows you to change the color and style of menu, guide and system screens using pre-set styles. For service provider.

## Hardware Settings

Hardware Settings

For service provider only.

## Working With Settings/Users



User accounts allows you to have separate parental controls, purchase limits and themes for different family members.



## 12 Settings

 
**Users/Settings** allows you to add a user account, edit an existing user account, change parental controls for a user account, or delete a user account.

**Note:** *The master account is the first account listed and is shown in yellow rather than white. You cannot delete the master account and cannot change the login name for the master account.*

### Adding a User Account



To create a new user account, highlight the **Add** button and press **OK**.

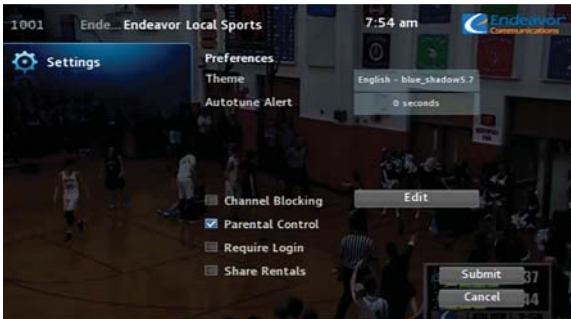

Highlight **New Login** to enter the name for the new account and press **OK**. An on-screen keyboard appears.



Use the **Arrow Keys** to highlight a letter or number and press **OK** to add it to the login name.

Once you have entered the desired name, highlight **Done** and press **OK** to return to the Create New User screen.





Highlight **New Password** to enter the password for the new account. Use the **Number Pad** on your remote to enter the password.

Confirm Password/ CATHRYN

Highlight **Confirm Password** to re-enter the password for the new account. Use the **Number Pad** on your remote to re-enter the password.

## Theme

Theme Default

Choose a theme to be used for the new account.

Allowance \$100

Highlight **Allowance \$** to enter a limit to the amount of programs that can be purchased per month for the new account. Use the **Number Pad** on your remote to enter a whole dollar amount (e.g. 200 to limit the account to \$200.00).

☒ Enable Caller ID

Highlight the **Enable Caller ID** check box and press **OK** to enable or disable Caller ID alerts to appear on the screen for this user account.

Enter PIN \*\*\*\*\*

Highlight **Enter PIN** to enter the master account's PIN as a further way of verifying the master account holder is creating this account. Use the **Number Pad** on your remote to enter the PIN. Then re-enter the PIN to confirm that you've entered it correctly.

Now highlight **Continue** and press **OK** to go to the next Add User Account screen.



## 12 Settings



The second Add User Account screen allows you to create parental controls specific to this user.

These parental control settings are identical to the settings shown earlier with the exception that there is no Unlock Timeout or Block Unrated setting.

Once you have entered the settings for the new account, highlight **Submit** and press **OK**.

### Editing a User Account



To edit a user account, highlight the user account and press **OK**, then highlight the **Edit** button and press **OK**.

**Note: The master account is the first account listed.**

## 12 Settings



2:42 am

Edit User - BILL

1 SURV No Program

**Settings**

Preferences

Users

Password \*\*\*\*

New Password \*\*\*\*

Confirm Password \*\*\*\*

PIN \*\*\*\*

New Pin \*\*\*\*

Confirm PIN \*\*\*\*

☒ Enable PIN

Submit Cancel

Using the **Number Pad** on your remote, enter the current password for this account.

Confirm Password \*\*\*\*

Now highlight **New Password** to change the password. Use the **Number Pad** on your remote to enter a numeric password.

Confirm Password \*\*\*\*

Highlight **Confirm Password** to re-enter the password. Use the **Number Pad** on your remote to exactly re-enter the password.

PIN \*\*\*\*\*

Highlight **PIN** and enter the account's existing PIN.

New Pin \*\*\*\*\*

Highlight **New PIN** and enter a new PIN for this account.

Confirm PIN \*\*\*\*\*

Highlight **Confirm PIN** to re-enter the new PIN.

☒ Enable PIN

Highlight the **Enable PIN** check box and press **OK** to enable or disable the need to use a PIN.

Once you have made all changes to this account, highlight **Submit** and press **OK**.



## 13 Sign Out / Sign In

### Sign Out / Sign In

This function is typically only used if there are multiple user accounts, usually when a parent adds a child as a new user. The parent's account (master account) controls the child's account (sub account).

### Go To Sign Out / Sign In



Press the **MENU** button on the remote. Scroll the menubar to the **Sign Out** icon and click **OK**.



You will then be signed out of your user account, and the **Sign In** screen will appear. Highlight the **Name** entry box and press **OK**.

Use the **Up/Down Arrows Keys** to select the name for the desired account. Then highlight the **Password** entry box and enter the password used for the desired account, highlight **Sign In** and press **OK**.

When a new user signs in, parental controls and other set restrictions for that account will be imposed.

# 14 Favorites



## Introducing Favorites

Save time and enjoy the channels you watch the most. Each Favorites list contains just the TV channels you wish to view. You can create multiple Favorites lists and quickly change the Guide to show them.

## Go To Favorites

Press **MENU** and highlight **Favorites**, then press **OK**.

A screen will appear with options to choose, edit, create or delete a list, or cancel.

 
## Choosing a Favorites List

There are two ways to choose a Favorites list:


### Option 1: Favorites From the Menubar

Follow the steps above in “Go To Favorites,” then highlight **Choose** and press **OK**. Then highlight the Favorites list you want and press **OK**.

### Option 2: Favorites From Guide

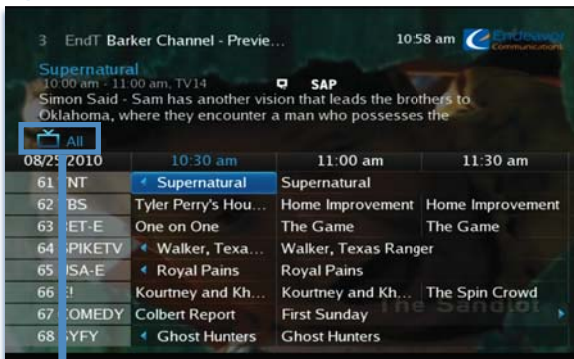

 While in **Guide**, you can cycle through your Favorites lists by pressing **GUIDE** repeatedly. Each press will activate the next Favorites list and it's channel line-up. Cycling to **All** will display all available programming.

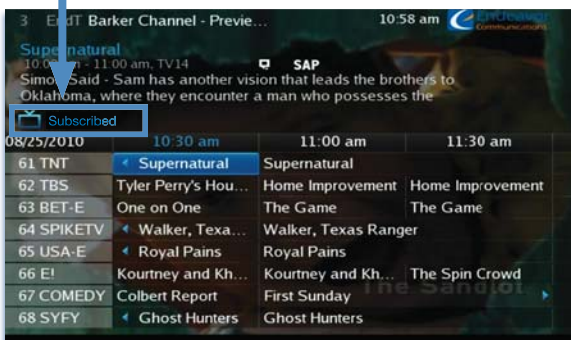

The name of the active **Favorites** list is highlighted on the **Guide**. This causes **Guide** to only display the channels you have selected for your **Subscribe Favorite List**.

Pressing **GUIDE** once you have cycled through all Favorites lists will exit **Guide**.



## 14 Favorites

### Creating or Editing a Favorites List

#### Step 1: Create or Edit

Follow the steps in “Go To Favorites,” highlight **Create** or **Edit**, and press **OK** to bring up the **Favorites** create/edit screen. This screen displays every channel available.

#### Step 2: Name Your Favorites List




The **Name** box is already highlighted. Press **OK** to bring up the on-screen keyboard.

Then, highlight **Clear All** and press **OK** to clear the default name. Now you can enter the name for your Favorites list using the on-screen keyboard.

Highlight each letter in the new name and press **OK**. Once you have entered the name, highlight **Done** and press **OK**.

#### Step 3: Choose Your Favorite Channels

**Arrow Up** and **Down** and select the channels to add or remove from your Favorites list and press **OK**. A channel included in the Favorites list shows a heart icon  to the right of the channel name.

To save your Favorites list, **Arrow Right** and highlight **Update** and press **OK**.

To cancel your Favorite list without saving it, highlight the **Cancel** button at the bottom right of your screen and press **OK**.

 
### Delete a Favorites List

#### Step 1: Select Delete

Follow the steps in “Go To Favorites,” then highlight **Delete** and press **OK**.

#### Step 2: Select the Favorites List to Delete

Highlight the Favorites list you want to delete and press **OK**. A box will appear asking you to confirm that you want to delete the selected Favorites list. Highlight **Yes** to delete or **No** to cancel, and press **OK**.



## Introducing Search

Search allows you to enter the title or partial title of a program or video and find any program matching the text you entered, including available On Demand programming and programming currently stored on your DVR.

## Go To Search

Press **MENU** and highlight **Search**, then press **OK**.

## Search for a Program

### Step 1: Enter the Program Title



 
When the Search screen appears, the highlight will be on the **Search** text box

Press **OK** and a keyboard will appear to the right of the screen.

Usually the first three or four letters in the name will be enough to find your program.

Use the **Up/Down/Left/Right Arrows** to highlight the letters on the on-screen keyboard, pressing **OK** after each letter, to enter your search keyword.

If you enter a wrong letter, highlight **Delete** and press **OK** to go back one space.

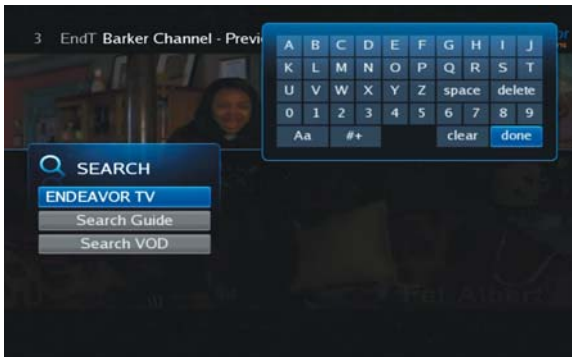

If you need to start over, highlight **Clear** and press **OK**.


When complete, highlight **Done** and press **OK**.





# 15 Search
 
## Step 2: Search

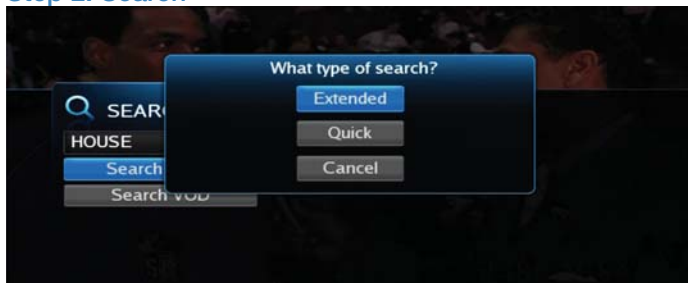

Highlight **Search** and press **OK** to perform a system-wide search of all programs that match your search criteria.

The search results appear in order on the right side of the screen.

## Step 3: Pick a Result



You can highlight any TV program or rental listing and press **OK** and a menu will appear, enabling you to...

(1) Schedule an Event (recording - see **8 DVR**).

(2) Watch a program if it's currently airing or located on your DVR.

(3) Record the selected program.

(4) Set a Reminder or Autotune for a program if it comes on later. (See **6 Guide - Alerts & Recordings** and **7 Recording**.)

 
(4) View Expanded Info.

(5) **Cancel** from this menu to exit back to your Search results.

**Note: You cannot set a Reminder, Autotune or Recording for Video On Demand rentals. The only options that come up when you search for a VOD is Rent, Expand Info, and Cancel.**

# Set Top Box

## Amino Kamai 6 Wireless

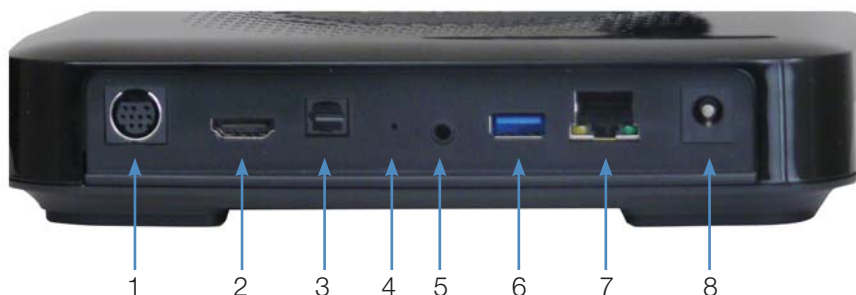


1. **AV Out** 9-pin DIN connector for connecting to c=video output using DIN-to-RCA cable.
2. **HDMI Connector** (High Definition Media Interface) Connects the set top box to your HDTV using an HDMI cable - provides audio and video.
3. **DIGITAL AUDIO** (S/PDIF) Connects the set top box to a home theater system via fiber optic cable for best quality audio - provides audio only.
4. **Reset** Resets the factory settings using thin metal probe.
5. **IR Extender Jack** Connects IR extender receiver.
6. **USB** (Universal Serial Bus) Connects the DVR/set top box to technician's equipment and other devices such as USB flash drive and external hard drive.
7. **Ethernet** Connects the set top box to the video service using a CATS Ethernet cable.
8. **DC Power Jack** Provides power to the set top box.

# Set Top Box
 
## Kamai 500 Set Top Box


---

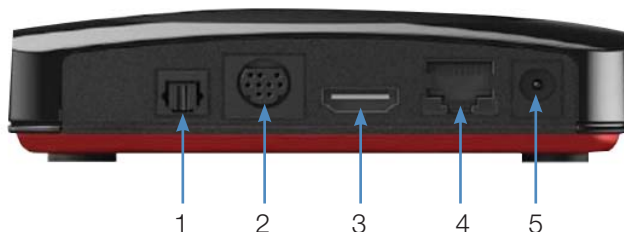

1. **DIGITAL AUDIO** (S/PDIF) Connects the set top box to a home theater system via fiber optic cable for best quality audio - provides audio only.
2. **SD Video Connector** DIN-to-SCART cable connects the SCART connector to the SCART IN port on your TV. This connection provides both video and audio so you do not need a separate audio connection.
3. **HDMI Connector** (High Definition Media Interface) Connects the set top box to your HDTV using an HDMI cable - provides audio and video.
4. **Ethernet** Connects the set top box to the video service using a CAT5 Ethernet cable.
5. **DC Power Jack** Provides power to the set top box.

# DVR/Set Top Box

 
## Entone 455 DVR & 450 Set Top Box

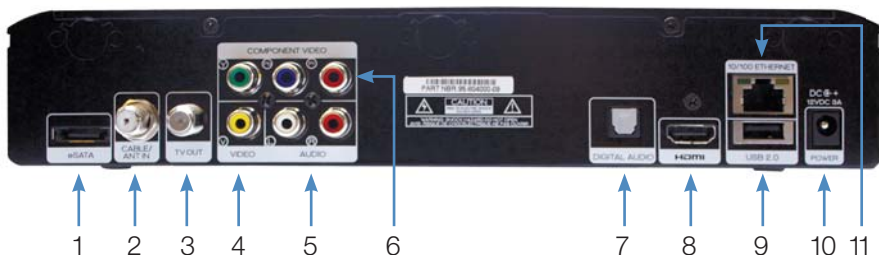

1. **eSATA** Connects the set top box to an external DVR storage device.
2. **CABLE/ANT IN** Connects the DVR/set top box to a wall jack using coax cable to provide video service.
3. **TV Out** Connects the DVR/set top box to your TV using a standard coax cable - provides audio and video.
4. **VIDEO** Connects the DVR/set top box to provide good quality video - provides video only.
5. **AUDIO LEFT/RIGHT** Connects the DVR/set top box to provide stereo audio - provides audio only.
6. **COMPONENT (HD Analog) OUTPUT** (Video/Audio Left/Audio Right) Connects the DVR/set top box to your TV or VCR to provide high definition quality analog video and stereo audio.
7. **DIGITAL AUDIO** (S/PDIF) Connects the DVR/set top box to a home theater system via fiber optic cable for best quality audio - provides audio only.
8. **HDMI** (High Definition Media Interface) Connects the DVR/set top box to your HDTV using an HDMI cable - provides audio and video.
9. **USB** (Universal Serial Bus) Connects the DVR/set top box to technician's equipment and other devices.
10. **Power Adapter** Provides power to the DVR/set top box.
11. **Ethernet** Connects the DVR/set top box to the video service using a CAT5 Ethernet cable.

# DVR/Set Top Box
 
## Entone 505 DVR & 500 Set Top Box

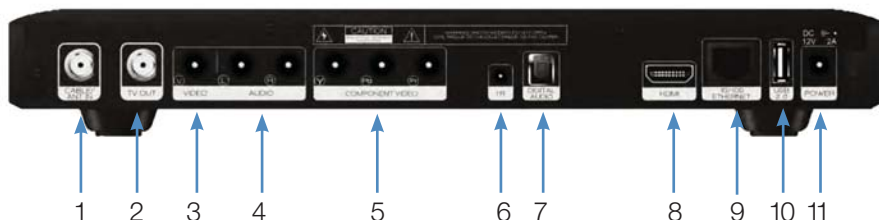

1. **CABLE/ANT IN** Connects the DVR/set top box to a wall jack using coax cable to provide video service.
2. **TV Out** Connects the set top box to your TV using a standard coax cable - provides audio and video.
3. **COMPOSITE VIDEO** Connects the DVR/set top box to provide good quality video to a standard definition TV (SDTV) - provides video only.
4. **AUDIO LEFT/RIGHT** Connects the DVR/set top box to provide stereo audio - provides audio only.
5. **COMPONENT (HD Analog) OUTPUT** (Video/Audio Left/Audio Right) Connects the DVR/set top box to your TV or VCR to provide high definition quality analog video and stereo audio.
6. **IR EXTENDER PORT** Connects DVR/set top box to an IR Extender Receiver.
7. **DIGITAL AUDIO** (S/PDIF) Connects the set DVR/set top box to a home theater system via fiber optic cable for best quality audio - provides audio only.
8. **HDMI** (High Definition Media Interface) Connects the set top box to your HDTV using an HDMI cable - provides audio and video.
9. **Ethernet** Connects the DVR/set top box to the video service using a CAT5 Ethernet cable.
10. **USB** (Universal Serial Bus) Connects the DVR/set top box to technician's equipment and other devices.
11. **Power Adapter** Provides DC power to the DVR/set top box.


# Movie Ratings
 
## MPAA (Motion Picture Association of America) Ratings System



### G – General Audience

This is a film which contains nothing which would, in the view of the MPAA Rating Board, be offensive to parents whose younger children view the film.



### PG – Parental Guidance Suggested

The theme of a PG-rated film may itself call for parental guidance. There may be some profanity in these films. There may be some violence or brief nudity. But these elements are not deemed so intense as to require that parents be strongly cautioned beyond the suggestion of parental guidance. There is no drug use content in a PG-rated film.



### PG-13 – Parents Strongly Cautioned

A PG-13 film is one which, in the view of the MPAA Rating Board, leaps beyond the boundaries of the PG rating in theme, violence, nudity, sensuality, language, or other contents, but does not quite fit within the restricted R category. Any drug use content will initially require at least a PG-13 rating.



### R – Restricted

An R-rated film may include hard language, or tough violence, or nudity within sensual scenes, or drug abuse or other elements, or a combination of some of the above, so that parents are counseled to take this advisory rating very seriously.



### NC-17 – No Children 17 or Under

NC-17 does not necessarily mean “obscene or pornographic” in the often accepted or legal meaning of those words. The MPAA Review Board does not and cannot mark films with those words. These are legal terms and for courts to decide. The reasons for the application of an NC-17 rating can be violence or sex or aberrational behavior or drug abuse or any other elements which, when present, most parents would consider too strong and therefore off-limits for viewing by their children.

# TV Ratings

## TV Parental Guidelines Ratings System

The TV Parental Guidelines ratings provide program ratings and content ratings. This provides a clearer idea of the reason for a program's rating.

### Program Ratings



#### TV-Y – All Children

This program is designed to be appropriate for all children.



#### TV-Y7 – Directed to Older Children

This program is designed for children age 7 and above. It may include mild fantasy violence or comedic violence.



#### TV-G – General Audience

Most parents would find this program suitable for all ages.



#### TV-PG – Parental Guidance Suggested

This program contains material that parents may find unsuitable for younger children.



#### TV-14 – Parents Strongly Cautioned

This program contains some material that many parents would find unsuitable for children under 14 years of age.



#### TV-MA – TV Mature Audience Only

This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.

### Content Ratings

Content Ratings are shown just below the program rating.

#### FV: Fantasy Violence (only applied to TV-Y7)

For those programs where fantasy violence may be more intense or more combative than other programs in this category.

The meaning of a content rating increases as the program rating increases.

<b>V: Violence</b>	TV-PG: Moderate; TV-14: Intense; TV-MA: Graphic
<b>S: Sexuality</b>	TV-PG: Some; TV-14: Intense; TV-MA: Explicit
<b>L: Language</b>	TV-PG: Infrequent; TV-14: Strong; TV-MA: Crude
<b>D: Dialogue</b>	TV-PG: Some; TV-14: Intense; TV-MA: Not used

For more information on TV Parental Guidelines Monitoring Board and its rating system, please visit [www.tvguidelines.org](http://www.tvguidelines.org).



**NEW!**

# Pay Your Endeavor Bill from Your Telephone - 24/7!

It's easy! Just dial toll-free  
**1-855-313-6315**

Enter your customer account number

- Pay your bill
- Check your account balance
- 24/7 access
- No processing fees
- Quick, convenient & secure!

**NEW  
AUTOMATED  
SECURE  
PAYMENT SYSTEM!**

**QUICK  
REFERENCE  
GUIDE  
ON BACK**



**Endeavor™**  
Communications  
[www.weEndeavor.com](http://www.weEndeavor.com)

ENDEAVOR  
**REFER  
A FRIEND**  
REFERRAL PROGRAM



Telephone



Internet



Television



Security

You'll Earn **\$25\*** towards  
Endeavor  
Services!



**Endeavor™**  
Communications

[www.weEndeavor.com](http://www.weEndeavor.com)

765.795.4261 - Toll Free 1.800.922.6677

# ENDEAVOR REFER A FRIEND REFERRAL PROGRAM

## Refer Friends & Family and you'll earn \$25!\*

Endeavor Communications is grateful for the opportunity to offer its members telephone, high speed internet, television & security solutions for your home and business. As a way of saying thanks, we'll give members a \$25\* credit towards your account when you refer any one of these services to your friends, family & co-workers.

Not an Endeavor member? No problem. Refer a new customer and receive a \$25\* payment per referral!

Just fill out the referral form and give them to your friends & family. When they add telephone, internet, television or security services and present the referral form, you'll receive a credit of \$25\*.

\*Certain restrictions apply. Eligibility is limited to new customers who have not had telephone, high speed internet, television or security service within the last 12 months; or existing customers who add a new service they have not had within the last 12 months. New customer must be in service for two consecutive billing cycles before credit is applied. Allow 4-6 weeks for payment. New customer must specify at time of service sign up that they were referred. Retroactive credits will not be issued. One \$25 referral credit per new customer is allowed per install date (regardless of number of services taken). Referral program applies to landline telephone, 3.0M internet or higher, basic or premier television, and any level of security package. New customer is subject to the service agreements required for each service offering. Written referral is required via Endeavor website or print referral form for eligibility.



**You can also refer a friend online at [www.weEndeavor.com/referafriend](http://www.weEndeavor.com/referafriend)  
Fill out the online form and hit "Submit". It's just that easy!**



### Endeavor Refer A Friend Referral Form

Ask your friends & family to present this form to Endeavor Communications when signing up for telephone, high speed internet, television or security services.

Your Name \_\_\_\_\_

Your Address \_\_\_\_\_

Your Phone \_\_\_\_\_

**I recommended Endeavor Communications to:**

Friend's Name \_\_\_\_\_

Friend's Address \_\_\_\_\_

Friend's Telephone \_\_\_\_\_ Best time to contact \_\_\_\_\_

Present form to: Endeavor Communications

2 S. West Street • P.O. Box 237 • Cloverdale, IN 46120 • 1.800.922.6677 • FAX: 765.795.6599

 
8/21/12

# Notes

---

# Notes

---

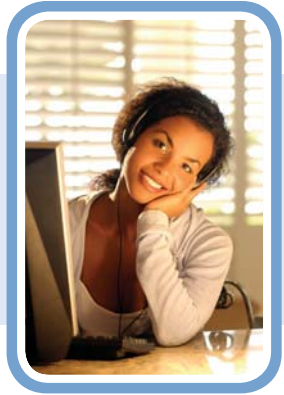

## Endeavor Communications

2 West Street, P.O. Box 237

Cloverdale, IN 46120

1-800-922-6677

765-795-4261

[www.weendeavor .com](http://www.weendeavor.com)